

# GARMIN®

## EDGE® 550

### GPS Cycling Computer



Owner's  
Manual

# Table of Contents

## Introduction..... 5

|                                  |   |
|----------------------------------|---|
| Getting Started.....             | 5 |
| Device Overview.....             | 5 |
| Home Screen Overview.....        | 6 |
| Viewing Widgets.....             | 6 |
| Viewing Glances.....             | 6 |
| Using the Shortcut Menu.....     | 7 |
| Acquiring Satellite Signals..... | 7 |

## Training..... 8

|                                                      |    |
|------------------------------------------------------|----|
| Going for a Ride.....                                | 8  |
| Evaluating an Activity.....                          | 8  |
| Training Plans.....                                  | 8  |
| Viewing the Training Calendar.....                   | 8  |
| Workouts.....                                        | 9  |
| Creating a Custom Workout on Garmin<br>Connect™..... | 9  |
| Daily Suggested Workouts.....                        | 9  |
| Starting a Workout.....                              | 9  |
| Stopping a Workout.....                              | 10 |
| Deleting Workouts.....                               | 10 |
| Workout Execution Score.....                         | 10 |
| Power Guide.....                                     | 10 |
| Creating a Power Guide.....                          | 11 |
| Starting a Power Guide.....                          | 11 |
| Timing Gates.....                                    | 11 |
| Creating Timing Gates.....                           | 12 |
| Riding Timing Gates.....                             | 12 |
| Deleting a Timing Gate Series.....                   | 13 |
| Segments.....                                        | 13 |
| Strava™ Segments.....                                | 13 |
| Following a Segment from Garmin<br>Connect™.....     | 13 |
| Enabling Segments.....                               | 14 |
| Racing a Segment.....                                | 14 |
| Viewing Segment Details.....                         | 14 |
| Segment Options.....                                 | 14 |
| Deleting a Segment.....                              | 15 |
| Training Indoors.....                                | 15 |
| Pairing Your Indoor Trainer.....                     | 15 |
| Using an Indoor Trainer.....                         | 15 |
| Interval Workouts.....                               | 16 |
| Creating an Interval Workout.....                    | 16 |
| Starting an Interval Workout.....                    | 16 |

|                                    |    |
|------------------------------------|----|
| Setting a Training Target.....     | 16 |
| Racing a Previous Activity.....    | 16 |
| Training for a Race Event.....     | 17 |
| Race Calendar and Primary Event... | 17 |

## My Stats..... 18

|                                                         |    |
|---------------------------------------------------------|----|
| Performance Measurements.....                           | 18 |
| Training Status Levels.....                             | 18 |
| About VO2 Max. Estimates.....                           | 19 |
| Acute Load.....                                         | 20 |
| Training Load Focus.....                                | 20 |
| Viewing Cycling Ability.....                            | 21 |
| About Training Effect.....                              | 21 |
| Getting Your Exercise Load<br>Estimate.....             | 22 |
| Recovery Time.....                                      | 22 |
| Getting Your FTP Estimate.....                          | 23 |
| Viewing Your Real-Time Stamina....                      | 24 |
| Viewing Your Stress Score.....                          | 25 |
| Viewing Your Power Curve.....                           | 25 |
| Syncing Activities and Performance<br>Measurements..... | 25 |
| Turning Off Performance<br>Notifications.....           | 25 |
| Pausing Your Training Status.....                       | 26 |
| Viewing Your Fitness Age.....                           | 26 |
| Viewing Intensity Minutes.....                          | 26 |
| Personal Records.....                                   | 26 |
| Viewing Your Personal Records.....                      | 26 |
| Reverting a Personal Record.....                        | 26 |
| Deleting a Personal Record.....                         | 26 |
| Training Zones.....                                     | 27 |
| Setting Your Heart Rate Zones.....                      | 27 |
| Setting Your Power Zones.....                           | 27 |

## Navigation..... 28

|                                                       |    |
|-------------------------------------------------------|----|
| Locations.....                                        | 28 |
| Marking Your Location.....                            | 28 |
| Saving Locations from the Map.....                    | 28 |
| Navigating to a Location.....                         | 28 |
| Navigating Back to Start.....                         | 29 |
| Starting a Ride From a Shared<br>Location.....        | 29 |
| Navigating to a Shared Location<br>During a Ride..... | 30 |
| Stopping Navigation.....                              | 30 |
| Editing Locations.....                                | 30 |

|                                                                     |    |
|---------------------------------------------------------------------|----|
| Deleting a Location.....                                            | 31 |
| Sharing a Location From a Map Using<br>the Garmin Connect™ App..... | 31 |
| Reporting a Hazard.....                                             | 31 |
| Courses.....                                                        | 32 |
| Creating a Course on Your Device...                                 | 32 |
| Creating a Course from a Recent<br>Ride.....                        | 32 |
| Following a Course From Garmin<br>Connect™ .....                    | 32 |
| Tips for Riding a Course.....                                       | 33 |
| Viewing Course Details.....                                         | 33 |
| Course Options.....                                                 | 33 |
| Rerouting a Course.....                                             | 33 |
| Stopping a Course.....                                              | 33 |
| Deleting a Course.....                                              | 33 |
| Trailforks Routes.....                                              | 34 |
| Using ClimbPro.....                                                 | 34 |
| Using the Climb Explore Widget.....                                 | 35 |
| Climb Categories.....                                               | 35 |
| Map Settings.....                                                   | 35 |
| Map Appearance Settings.....                                        | 36 |
| Changing the Map Orientation.....                                   | 36 |
| Managing Maps.....                                                  | 36 |
| Route Settings.....                                                 | 36 |
| Selecting an Activity for Route<br>Calculation.....                 | 36 |

## **Connected Features..... 37**

|                                              |    |
|----------------------------------------------|----|
| Pairing Your Phone.....                      | 37 |
| Bluetooth® Connected Features.....           | 37 |
| Safety and Tracking Features.....            | 37 |
| Listening to Music.....                      | 44 |
| Garmin Share.....                            | 44 |
| Phone Apps and Computer<br>Applications..... | 45 |
| Garmin Connect.....                          | 45 |
| Connect IQ™ Downloadable<br>Features.....    | 47 |
| Wi-Fi® Connectivity Features.....            | 47 |
| Setting Up Wi-Fi® Connectivity .....         | 48 |
| Wi-Fi® Settings.....                         | 48 |

## **Wireless Sensors..... 49**

|                                    |    |
|------------------------------------|----|
| Pairing Your Wireless Sensors..... | 49 |
| Wireless Sensor Battery Life.....  | 50 |

|                                                                           |    |
|---------------------------------------------------------------------------|----|
| Data Averaging for Cadence or<br>Power.....                               | 50 |
| Training with Power Meters.....                                           | 50 |
| Calibrating Your Power Meter.....                                         | 50 |
| Pedal-Based Power.....                                                    | 50 |
| Cycling Dynamics.....                                                     | 50 |
| Updating the Rally™ System Software<br>Using the Edge® Bike Computer..... | 51 |
| Situational Awareness.....                                                | 51 |
| Using the Varia™ Camera Controls...                                       | 52 |
| Radar Data Screen.....                                                    | 52 |
| Electronic Shifters.....                                                  | 53 |
| eBike Training.....                                                       | 53 |
| Viewing eBike Sensor Details.....                                         | 53 |
| inReach® Remote.....                                                      | 54 |
| Using the inReach® Remote.....                                            | 54 |

## **History..... 55**

|                                                 |    |
|-------------------------------------------------|----|
| Viewing Your Ride.....                          | 55 |
| Viewing Your Time in Each Training<br>Zone..... | 55 |
| Deleting a Ride.....                            | 55 |
| Viewing Data Totals.....                        | 55 |
| Deleting Data Totals.....                       | 55 |
| Data Recording.....                             | 56 |
| Data Management.....                            | 56 |
| Connecting the Device to Your<br>Computer.....  | 56 |
| Transferring Files to Your Device....           | 56 |
| Deleting Files.....                             | 56 |

## **Customizing Your Device..... 57**

|                                            |    |
|--------------------------------------------|----|
| Profiles.....                              | 57 |
| Biking Activity Profiles.....              | 57 |
| Setting Up Your User Profile.....          | 57 |
| Training Settings.....                     | 57 |
| Updating Your Activity Profile.....        | 58 |
| Adding a Data Screen.....                  | 58 |
| Adding a Music Control Data<br>Screen..... | 59 |
| Adding Workout Data Fields.....            | 59 |
| Editing a Data Screen.....                 | 59 |
| Rearranging Data Screens.....              | 59 |
| Alerts and Prompts Settings.....           | 60 |
| Auto Lap® .....                            | 61 |
| Using Auto Sleep.....                      | 62 |
| Using Auto Pause.....                      | 62 |

|                                              |    |
|----------------------------------------------|----|
| Starting the Timer Automatically....         | 62 |
| Using Auto Scroll.....                       | 62 |
| Locking and Unlocking the Bike Computer..... | 63 |
| Changing the Satellite Setting.....          | 63 |
| Phone Settings.....                          | 63 |
| System Settings.....                         | 63 |
| Display Settings.....                        | 63 |
| Customizing the Glances.....                 | 64 |
| Customizing the Widget Loop.....             | 64 |
| Data Recording Settings.....                 | 64 |
| Changing the Units of Measure.....           | 64 |
| Turning the Device Tones On and Off.....     | 65 |
| Changing the Device Language.....            | 65 |
| Time Zones.....                              | 65 |
| Setting Up Extended Display Mode.....        | 65 |
| Exiting Extended Display Mode.....           | 65 |

## **Device Information..... 66**

|                                                          |    |
|----------------------------------------------------------|----|
| Charging the Device.....                                 | 66 |
| About the Battery.....                                   | 66 |
| Installing the Standard Mount.....                       | 66 |
| Installing the Out-Front Mount.....                      | 67 |
| Releasing the Edge®.....                                 | 68 |
| Installing the Mountain Bike Mount....                   | 68 |
| Attaching a Tether.....                                  | 70 |
| Product Updates.....                                     | 70 |
| Updating the Software Using the Garmin Connect™ App..... | 70 |
| Updating the Software Using Garmin Express™.....         | 71 |
| Specifications.....                                      | 71 |
| Edge® Specifications.....                                | 71 |
| Viewing Device Information.....                          | 71 |
| Viewing Regulatory and Compliance Information.....       | 71 |
| Device Care.....                                         | 71 |
| Cleaning the Device.....                                 | 71 |
| Cleaning the USB Port.....                               | 72 |

## **Troubleshooting..... 73**

|                                       |    |
|---------------------------------------|----|
| Resetting the Edge® Bike Computer.... | 73 |
| Restoring the Default Settings.....   | 73 |
| Clearing User Data and Settings.....  | 73 |
| Exiting Demo Mode.....                | 73 |
| Maximizing Battery Life.....          | 73 |

|                                              |    |
|----------------------------------------------|----|
| Turning On Battery Saver Mode.....           | 73 |
| My phone will not connect to the device..... | 73 |
| Improving GPS Satellite Reception....        | 74 |
| My device is in the wrong language....       | 74 |
| Setting Your Elevation.....                  | 74 |
| Temperature Readings.....                    | 74 |
| Calibrating the Barometric Altimeter...      | 74 |
| Calibrating the Compass.....                 | 74 |
| Replacement O-rings.....                     | 74 |
| Getting More Information.....                | 75 |

## **Appendix..... 76**

|                                   |    |
|-----------------------------------|----|
| Data Fields.....                  | 76 |
| VO2 Max. Standard Ratings.....    | 81 |
| FTP Ratings.....                  | 82 |
| Heart Rate Zone Calculations..... | 82 |
| Wheel Size and Circumference..... | 82 |



# Introduction



**WARNING**

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.


Always consult your physician before you begin or modify any exercise program.

## Getting Started

When using your Edge® 550 bike computer the first time, you should complete these tasks to set it up and learn about the basic features.

- 1 Charge the bike computer ([Charging the Device](#), page 66).
- 2 Install the bike computer using the standard mount ([Installing the Standard Mount](#), page 66) or the out-front mount ([Installing the Out-Front Mount](#), page 67).
- 3 Turn on the bike computer ([Device Overview](#), page 5).
- 4 Follow the on-screen instructions to complete the initial setup.  
During the initial setup, you can pair your phone with your bike computer to receive notifications, sync your activities, and more ([Pairing Your Phone](#), page 37).
- 5 Check for software updates ([System Settings](#), page 63).  
For the best experience, you should keep the software on your bike computer up to date. Software updates provide changes and improvements to privacy, security, and features.
- 6 Locate satellites ([Acquiring Satellite Signals](#), page 7).
- 7 Go for a ride ([Going for a Ride](#), page 8).
- 8 Upload your ride to your Garmin Connect™ account ([Sending Your Ride to Garmin Connect™](#), page 46).

## Device Overview

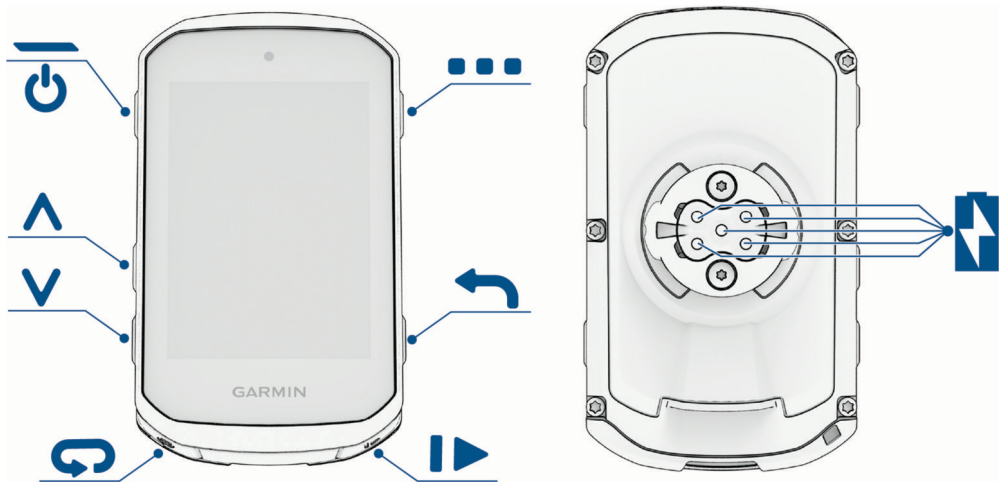

|                                                                                     |                                                                                                                          |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
|  | Press to enter sleep mode and wake the device.<br>Hold to turn the device on and off.                                    |
|  | Press to scroll through the data screens, options, and settings.<br>From the home screen, press to view the status page. |
|  | Press to scroll through the data screens, options, and settings.<br>From the home screen, press to view glances.         |
|  | Press to mark a new lap.                                                                                                 |
|  | Press to start and stop the activity timer.                                                                              |
|  | Press to return to the previous screen.<br>Hold to return to the home screen.                                            |

|                                                                                   |                                                 |
|-----------------------------------------------------------------------------------|-------------------------------------------------|
|  | Hold to open the main menu.<br>Press to select. |
|  | Charge using an external power accessory.       |

**NOTE:** Go to [buy.garmin.com](http://buy.garmin.com) to purchase optional accessories.

## Home Screen Overview


The home screen gives you quick access to all the features of the Edge® bike computer.

|                                                                                   |                                                                                                                                                     |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Battery status                                                                                                                                      |
|  | GPS signal strength                                                                                                                                 |
|  | Bluetooth® status                                                                                                                                   |
|  | Select to go for a ride.<br>Use the arrows to change the biking profile.                                                                            |
| Dynamic Area                                                                      | Select to view your previous rides and totals, daily suggested workouts, training status updates, and recently created courses and workouts.        |
| Menu                                                                              | Select to access connected features, personal records, contacts, and settings.<br>Select to access your Connect IQ™ apps, widgets, and data fields. |
| Navigation                                                                        | Select to browse the map, mark a location, search for locations, and create or navigate a course.                                                   |
| Training                                                                          | Select to access your segments, workouts, and other training options.                                                                               |

## Viewing Widgets

Your device is preloaded with several widgets, and more are available when you pair your device with a phone or other compatible device.

- 1 From the home screen, press  until the status widget appears.

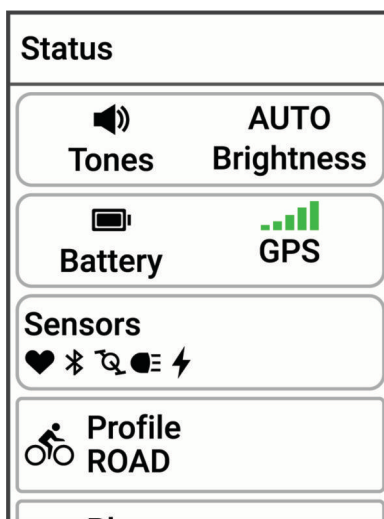

A flashing icon means the device is searching for a signal. A solid icon means the signal was found or the sensor is connected. You can select any icon to change the settings.

- 2 Select  or  to view more widgets.

The next time you view the widgets, the last widget you viewed appears.

## Viewing Glances


Glances provide quick access to health data, activity information, built-in sensors, and more.

- From the home screen, press .  
The device scrolls through the glances.
- Select a glance to view additional information.
- Select  to customize the glances ([Customizing the Glances, page 64](#)).

## Using the Shortcut Menu

Shortcut menus enable you to quickly access features or perform functions, such as adding a sensor or activity profile, or starting a ride from a map.

- When the menu tray ① appears on the screen, press or hold ⋮ to view the shortcut menu.

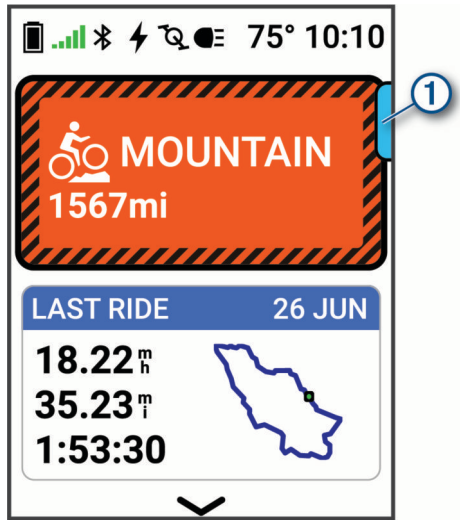

- When the menu tray is , press ⋮.
- When the menu tray is , hold ⋮.

## Acquiring Satellite Signals

The device may need a clear view of the sky to acquire satellite signals. The time and date are set automatically based on the GPS position.

**TIP:** For more information about GPS, go to [garmin.com/aboutGPS](http://garmin.com/aboutGPS).

- 1 Go outdoors to an open area.  
The front of the device should be oriented toward the sky.
- 2 Wait while the device locates satellites.  
It may take 30–60 seconds to locate satellite signals.

# Training

## Going for a Ride

- 1 Hold  to turn on the device.
- 2 Go outside, and wait while the device locates satellites.  
The satellite bars turn green when the device is ready.
- 3 From the home screen, press .
- 4 Select an activity profile.
- 5 Press  to start the activity timer.

|                                                                                                          |                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| SPEED<br><b>18.2<sup>m</sup><sub>h</sub></b>                                                             |  CALORIES<br><b>750</b>                           |
| DISTANCE<br><b>22.05<sup>m</sup><sub>i</sub></b>                                                         |                                                                                                                                    |
| TIMER<br><b>1:24:14</b>                                                                                  |                                                                                                                                    |
|  CALORIES<br><b>750</b> |  ELEVATION<br><b>2214<sup>f</sup><sub>t</sub></b> |

**NOTE:** History is recorded only while the activity timer is running.

- 6 Press  or  for additional data screens.
- 7 If necessary, press  to view menu options such as alerts and data fields.
- 8 Press  to stop the activity timer.

**TIP:** Before you save this ride and share it on your Garmin Connect™ account, you can change the ride type. Accurate ride type data is important for creating bike friendly courses.

- 9 Select **Save**.

## Evaluating an Activity

You can customize the self-evaluation setting for your activity profiles ([Training Settings, page 57](#)).

- 1 After you complete an activity, select **Save**.
- 2 Select  or  to choose a number that corresponds with your perceived effort.

**NOTE:** You can select  to skip the self evaluation.

- 3 Select how you felt during the activity.
- 4 Select .

You can view evaluations in the Garmin Connect™ app.

## Training Plans

You can set up a training plan in your Garmin Connect™ account and send the training plan workouts to your device. All scheduled workouts sent to the device appear in the training calendar.

## Viewing the Training Calendar

When you select a day in the training calendar, you can view or start the workout. You can also view saved rides.

- 1 Select **Training**.
- 2 Select the calendar or the days of the week.
- 3 Select a day to view a scheduled workout or a saved ride.

## Workouts

You can create custom workouts that include goals for each workout step and for varied distances, times, and calories. You can create workouts using Garmin Connect™, and transfer them to your device. You can also create and save a workout directly on your device.

You can schedule workouts using Garmin Connect. You can plan workouts in advance and store them on your device.

### Creating a Custom Workout on Garmin Connect™

Before you can create a workout on the Garmin Connect app, you must have a Garmin Connect account ([Garmin Connect, page 45](#)).

- 1 From the Garmin Connect app, select •••.
  - 2 Select **Training & Planning > Workouts > Create a Workout**.
  - 3 Select an activity.
  - 4 Create your custom workout.
  - 5 Select **Save**.
  - 6 Enter a name for your workout, and select **Save**.
- The new workout appears in your list of workouts.

**NOTE:** You can send this workout to your device ([Following a Workout From Garmin Connect™, page 9](#)).

### Following a Workout From Garmin Connect™

Before you can download a workout from Garmin Connect, you must have a Garmin Connect account ([Garmin Connect, page 45](#)).

- 1 Select an option:
  - Open the Garmin Connect app, and select •••.
  - Go to [connect.garmin.com](https://connect.garmin.com).
- 2 Select **Training & Planning > Workouts**.
- 3 Find a workout, or create and save a new workout.
- 4 Select  or **Send to Device**.
- 5 Follow the on-screen instructions.

### Daily Suggested Workouts

Daily suggested workouts are recommended based on your previous activities saved to your Garmin Connect™ account. When you are training for a race event, your daily suggested workouts appear in your training calendar ([Viewing the Training Calendar, page 8](#)) and adapt to your upcoming race ([Training for a Race Event, page 17](#)). You must ride with heart rate and power for one week to get workout recommendations.

### Following a Daily Suggested Workout

You must ride with heart rate and power for one week to get workout recommendations.

- 1 Select **Training > Workouts > Daily Suggested Workout**.
- 2 Select **Ride**.

### Turning Daily Suggested Workout Prompts On and Off

- 1 Select **Training > Workouts > Daily Suggested Workout > ⋮**.
- 2 Select **Show on Home Screen**.

### Starting a Workout

- 1 Select **Training > Workouts**.
- 2 Select a workout.
- 3 Select **Workout Notes** (optional).
- 4 If necessary, select an option:
  - Select  to enable and check your suggested ride nutrition and hydration.
  - Select  to review and add to your workout gear checklist.
  - Select  to add a course to your workout.
  - Select  to check the weather.
- 5 Select **Ride**.

6 Press  to start the activity timer.

After you begin a workout, the device displays each step of the workout, the target (if any), and current workout data. An audible alarm sounds when you are about to finish a workout step. A message appears, counting down the time or distance until a new step begins.

### Stopping a Workout

- At any time, press  to end a workout step and begin the next step.
- From the workout screen, hold , and select an option:
  - Select  to pause the current workout step.
  - Select  to end a workout step and repeat the previous step.
  - Select  to end a workout step and begin the next step.
- At any time, press  to stop the activity timer.
- At any time, press , and select **Stop Workout** >  to end the workout.

### Deleting Workouts

- 1 Select **Training** > **Workouts** >  > **Delete Multiple**.
- 2 Select one or more workouts.
- 3 Select .

### Workout Execution Score

After you complete a workout, the device displays your workout execution score based on how accurately you completed the workout. The active workout steps are prioritized the highest, measuring how closely your effort level matches the step target, and also that you completed all the steps. Warm up and recovery steps have a lower impact on your score. The cool down step does not impact your workout execution score at all.

Your workout execution score appears only for workouts with heart rate, speed, pace, or power targets.


|                                                                                     |                    |
|-------------------------------------------------------------------------------------|--------------------|
|    | Good, 67 to 100%   |
|  | Average, 34 to 66% |
|  | Low, 0 to 33%      |

### Power Guide

You can create and use a power strategy to plan your effort on a course. Your Edge® device uses your FTP, the course elevation, and the projected time it will take you to complete the course to create a customized power guide.

One of the most important steps in planning a successful power guide strategy is choosing your effort level. Putting a harder effort into the course will increase the power recommendations, while choosing an easier effort will reduce them ([Creating a Power Guide, page 11](#)). The primary goal of a power guide is to help you complete the course based on what is known about your ability, not to achieve a specific target time. You can adjust the effort level during your ride.

Power guides are always associated with a course and cannot be used with workouts or segments. You can view and edit your strategy in Garmin Connect™ and sync it with compatible Garmin® devices. This feature requires a power meter, which must be paired with your device ([Pairing Your Wireless Sensors, page 49](#)). After the devices are paired, you can customize the optional data fields ([Data Fields, page 76](#)).

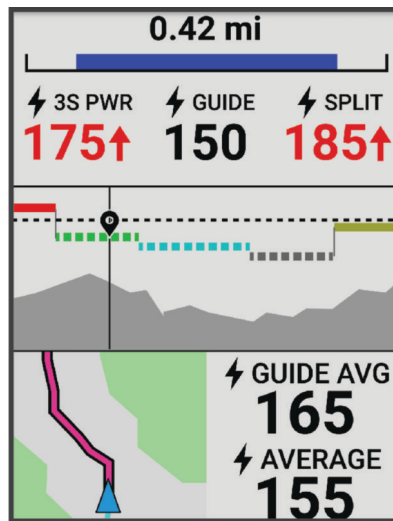

## Creating a Power Guide

Before you can create a power guide, you must pair a power meter with your device ([Pairing Your Wireless Sensors, page 49](#)). You must also have a saved course on your device ([Courses, page 32](#)).

- 1 Select **Training > Power Guide > Create Power Guide**.
- 2 Select a saved course.
- 3 Enter a name for the power guide, and select ✓.
- 4 Select a riding position.
- 5 Select a gear weight.
- 6 Press ✓ to review the power guide details (optional).
- 7 Select **Save**.

## Starting a Power Guide

Before you can start a power guide, you must create a power guide ([Creating a Power Guide, page 11](#)).

- 1 Select **Training > Power Guide**.
- 2 Select a power guide.
- 3 Select **Ride**.
- 4 Press ► to start the activity timer.

## Timing Gates

### ⚠ WARNING

Always ride under control when using the Timing Gates feature. Failure to ride safely and responsibly could result in serious personal injury or property damage.

When connected to a GPS satellite signal, you can use your Edge® bike computer to create a timing gate series, using locations along a route to record split times over multiple runs through the virtual gates. Each circuit through the timing gate is known as a run. During a ride, the bike computer records a split time when you pass a gate, and indicates if the split was faster or slower than the split from the fastest run in that ride.



| RUN SPEED                      |        | RUN TIME |  |
|--------------------------------|--------|----------|--|
| 18.2 <sup>m</sup> <sub>h</sub> |        | 6:36.8   |  |
| Split Performance              |        |          |  |
|                                | Run 4  | Best     |  |
| 1                              | 1:57.0 | 1:57.0   |  |
| 2                              | 2:32.6 | 2:32.6   |  |
| 3                              | 0:46.0 | 0:38.7   |  |
| 4                              | 1:29.6 | 1:28.5   |  |

After the ride, the bike computer summarizes the splits to show the best run between each gate. On your Garmin Connect™ account, you can view a detailed post-ride analysis of all runs through each gate.

## Creating Timing Gates

Before you can create timing gates, you must acquire satellite signals and be physically at the location where you want to set your gate ([Acquiring Satellite Signals, page 7](#)).

In addition to the starting gate, you can create up to 10 timing gates in each series.

- 1 Select **Training > Timing Gates > Create Timing Gate Series**.
- 2 Select **Walking** or **Riding** to set how you are creating the timing gates.  
If walking, follow the on-screen instructions to calibrate the compass.
- 3 Hold .
- 4 Point the on-screen arrow in the direction of travel, and select .
- 5 Repeat steps 2 and 3 to create all of the gates in the series.


**TIP:** Press  to pan and zoom the map.

- 6 Press .
- 7 Select an option:
  - Select **Delete Last Gate** to delete the most recent gate.
  - Select **Save Series** to save and name the timing gate series.  
**TIP:** Follow the on-screen instructions to name the gate series.
  - Select **Exit and Discard Series** to delete all of the timing gates in this series.
  - Select **Continue Creating Gates** to return to the map and create additional gates in the series.

## Riding Timing Gates

Before you can ride a timing gate series, you must create the timing gates ([Creating Timing Gates, page 12](#)).

- 1 Select **Training > Timing Gates**.
- 2 Select a timing gate series.
- 3 Select **Review Gates** to preview the gates (optional).
- 4 Select **Ride**.

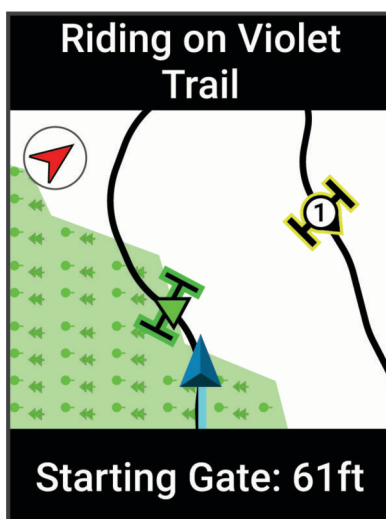

### Deleting a Timing Gate Series

- 1 Select **Training** > **Timing Gates** > ⋮ > **Delete**.
- 2 Select a timing gate series.
- 3 Select ✓ > ✓.

### Segments

**Following a segment:** You can send segments from your Garmin Connect™ account to your device. After a segment is saved to your device, you can follow the segment.

**NOTE:** When you download a course from your Garmin Connect account, all segments in the course are downloaded automatically.

**Racing a segment:** You can race a segment, trying to match or exceed your personal record or other cyclists who have ridden the segment.

### Strava™ Segments

You can download Strava segments to your Edge® 550 device. Follow Strava segments to compare your performance with your past rides, friends, and pros who have ridden the same segment.

To sign up for a Strava membership, go to the segments menu in your Garmin Connect™ account. For more information, go to [www.strava.com](http://www.strava.com).

The information in this manual applies to both Garmin Connect segments and Strava segments.

### Using the Strava™ Segment Explore Widget

The Strava Segment Explore widget allows you to view and ride nearby Strava segments.

From the Strava Segment Explore widget, select a segment.

The segment appears on the map.

### Following a Segment from Garmin Connect™

Before you can download and follow a segment from Garmin Connect, you must have a Garmin Connect account ([Garmin Connect, page 45](#)).

**NOTE:** If you are using Strava™ segments, your starred segments are transferred automatically to your device when it syncs with the Garmin Connect app.

- 1 Select an option:
  - Open the Garmin Connect app.
  - Go to [connect.garmin.com](http://connect.garmin.com).
- 2 Select a segment.
- 3 Select  or **Send to Device**.
- 4 Follow the on-screen instructions.
- 5 On the Edge® bike computer, select **Training** > **Segments**.
- 6 Select the segment.
- 7 Select **Ride**.

## Enabling Segments

You can choose which segments currently loaded on the device are enabled.


- 1 Select **Training** > **Segments** > **⋮** > **Enable/Disable** > **Edit Multiple**.
- 2 Select the segments to enable.

## Racing a Segment

Segments are virtual race courses. You can race a segment, and compare your performance to past activities, other riders' performance, connections in your Garmin Connect™ account, or other members of the cycling community. You can upload your activity data to your Garmin Connect account to view your segment position.

**NOTE:** If your Garmin Connect account and Strava™ account are linked, your activity is automatically sent to your Strava account so you can review the segment position.

- 1 Press **▶** to start the activity timer, and go for a ride.  
When your path crosses an enabled segment, you can race the segment.
- 2 Start racing the segment.  
The segment data screen appears automatically.

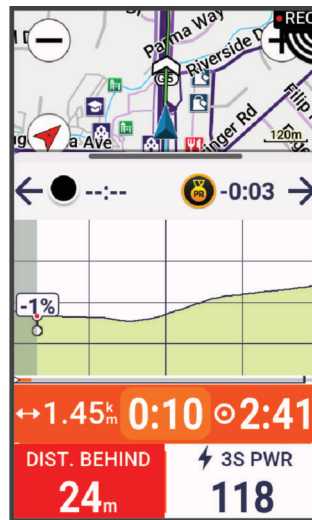

- 3 If necessary, press **⋮** to change your goal during your race.  
You can race against the segment leader, your past performance, or other riders (if applicable). The goal automatically adjusts based on your current performance.

A message appears when the segment is complete.

## Viewing Segment Details

- 1 Select **Training** > **Segments**.
- 2 Select a segment.
- 3 Select an option:
  - Select **Map** to view the segment on the map.
  - Select **Elevation** to view an elevation plot of the segment.
  - Select **Leaderboard** to view the ride times and average speeds for the segment leader, group leader or challenger, your personal best time and average speed, and other riders (if applicable).  
**TIP:** You can select a leaderboard entry to change your segment race goal.
  - Select **Enable** to enable segment racing and prompts that alert you to approaching segments.

## Segment Options

Select **Training** > **Segments** > **⋮**.

**Turn Guidance:** Enables or disables turn prompts.

**Auto Select Effort:** Enables or disables automatic goal adjustment based on your current performance.

**Search:** Allows you to search for saved segments by name.

**Enable/Disable:** Enables or disables the segments currently loaded on the device.

**Default Leader Priority:** Allows you to select the order for goal targets while racing a segment.

**Delete:** Allows you to delete all or multiple saved segments from the device.

### Setting a Segment to Adjust Automatically

You can set your device to automatically adjust the target race time of a segment based on your performance during the segment.

**NOTE:** This setting is enabled for all segments by default.

Select **Training** > **Segments** >  > **Auto Select Effort** > **On**

### Deleting a Segment

- 1 Select **Training** > **Segments**.
- 2 Select a segment.
- 3 Select  > .

## Training Indoors

The device includes an indoor activity profile where GPS is turned off. When GPS is turned off, speed and distance are not available unless you have a compatible sensor or indoor trainer that sends speed and distance data to the device.

### Pairing Your Indoor Trainer

- 1 Bring the Edge® bike computer within 3 m (10 ft.) of the indoor trainer.
- 2 Select the indoor biking profile.
- 3 On the indoor trainer, start pedaling or press the pairing button.  
For more information, see the owner's manual for your indoor trainer.
- 4 On the Edge bike computer, a message appears.  
If you don't see a message, select  > **Sensors** > **Add Sensor**.
- 5 Follow the on-screen instructions.  
When the indoor trainer is paired with your Edge bike computer using ANT+® technology, the indoor trainer appears as a connected sensor. You can customize your data fields to display sensor data.

### Using an Indoor Trainer

Before you can use a compatible indoor trainer, you must pair the trainer with your device using ANT+® technology ([Pairing Your Wireless Sensors, page 49](#)).

Not all features and settings are available for every indoor trainer. For more information, see the owner's manual for your trainer.

You can use your device with an indoor trainer to simulate resistance while following a course, activity, or workout. While using an indoor trainer, GPS is turned off automatically.

- 1 Select **Training** > **Smart Trainer**.
- 2 Select an option:
  - Select **Free Ride** to manually adjust the resistance level.
  - Select **Follow a Course** to follow a saved course ([Courses, page 32](#)).
  - Select **Follow an Activity** to follow a saved ride ([Going for a Ride, page 8](#)).
  - Select **Follow a Workout** to follow a saved workout ([Workouts, page 9](#)).
  - If available, select **Set Grade**, **Set Resistance**, or **Set Target Power** to customize your ride.

The trainer resistance changes based on the course or ride information.

- 3 Select a course, activity, or workout.
- 4 Select **Ride**.
- 5 Press  to start the activity timer.

### Setting Resistance

- 1 Select **Training** > **Smart Trainer** > **Set Resistance**.
- 2 Select  or  to set the resistance force applied by the trainer.
- 3 Press  to start the activity timer.
- 4 If necessary, select  > **Set Resistance** to adjust the resistance during your activity.

### Setting Target Power

- 1 Select **Training** > **Smart Trainer** > **Set Target Power**.

- 2 Set the target power value.
- 3 Select an activity profile.
- 4 Press  to start the activity timer.  
The resistance force applied by the trainer is adjusted to maintain a constant power output based on your speed.
- 5 If necessary, select  > **Set Target Power** to adjust the target power during your activity.

## Interval Workouts

You can create interval workouts based on distance or time. The device saves your custom interval workout until you create another interval workout. You can use open intervals when you are riding a known distance. When you press , the device records an interval and moves to a rest interval.

### Creating an Interval Workout

- 1 Select **Training** > **Intervals** >  > **Intervals** > **Target Type**.
- 2 Select an option.  
**TIP:** You can create an open-ended interval by setting the type to Open.
- 3 If necessary, enter a high and low value for the interval.
- 4 Select **Duration**, enter a time interval value, and select .
- 5 Select .
- 6 Select **Rest** > **Target Type**.
- 7 Select an option.
- 8 If necessary, enter a high and low value for the rest interval.
- 9 Select **Duration**, enter time value for the rest interval, and select .
- 10 Select .
- 11 Select one or more options:
  - To set the number of repetitions, select **Repeat**.
  - To add an open-ended warm up to your workout, select **Warm Up** > **On**.
  - To add an open-ended cool down to your workout, select **Cool Down** > **On**.

### Starting an Interval Workout

- 1 Select **Training** > **Intervals** > **Do Workout**.
- 2 Press  to start the activity timer.
- 3 When your interval workout has a warm up, press  to begin the first interval.
- 4 Follow the on-screen instructions.

When you complete all of the intervals, a message appears.

### Setting a Training Target

The training target feature works with the Virtual Partner® feature so you can train toward a set distance, distance and time, or distance and speed goal. During your training activity, the device gives you real-time feedback about how close you are to achieving your training target.

- 1 Select **Training** > **Set a Target**.
- 2 Select an option:
  - Select **Distance Only** to select a preset distance or enter a custom distance.
  - Select **Distance and Time** to select a distance and time target.
  - Select **Distance and Speed** to select a distance and speed target.

The training target screen appears, indicating your estimated finish time. The estimated finish time is based on your current performance and the time remaining.

- 3 Select .
- 4 Press  to start the activity timer.
- 5 After you complete your activity, press , and select **Save**.

### Racing a Previous Activity

You can race a previously recorded activity or saved course.

- 1 Select **Training** > **Race an Activity**.
- 2 Select an option:
  - Select **Ride History**.
  - Select **Saved Courses**.
- 3 Select the activity or course.
- 4 Select **Ride**.
- 5 Press **▶** to start the activity timer.


## Training for a Race Event

Your Edge® bike computer can suggest daily workouts to help you train for a cycling event, if you have a VO2 max. estimate ([About VO2 Max. Estimates, page 19](#)) and ride with heart rate and power for one week.

- 1 On your phone or computer, go to your Garmin Connect™ calendar.
- 2 Select the day of the event, and add the race event.  
You can search for an event in your area or create your own event.
- 3 Add details about the event, and add the course if it's available.
- 4 Sync your device with your Garmin Connect account.
- 5 On your device, scroll to the primary event glance to see a countdown to your primary race event.

## Race Calendar and Primary Event

When you add a race event to your Garmin Connect™ calendar, you can view the event on your Edge® bike computer by adding the primary event glance ([Customizing the Glances, page 64](#)). The event date must be in the next 365 days. The device displays a countdown to the event, event time and location, course details (if available), and weather information.

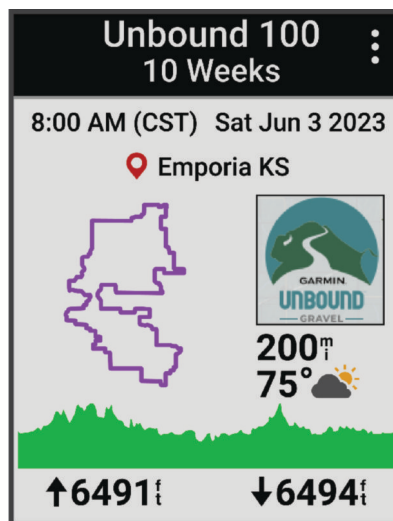

**NOTE:** Historical weather information for the location and date is available right away. Local forecast data appears approximately 14 days before the event.

From the primary event glance, press **▼** to view course information and weather details. Depending on the available course data for your event, you can view elevation data, the course map, course demands, and climb details.

## My Stats

The Edge® 550 bike computer can track your personal statistics and calculate performance measurements. Performance measurements require a compatible heart rate monitor, power meter, or smart trainer.

### Performance Measurements

These performance measurements are estimates that can help you track and understand your training activities and race performances. The measurements require a few activities using wrist-based heart rate or a compatible chest heart rate monitor. Cycling performance measurements require a heart rate monitor and a power meter.

These estimates are provided and supported by Firstbeat Analytics™. For more information, go to [www.garmin.com/performance-data](http://www.garmin.com/performance-data).

The estimates may seem inaccurate at first. The device requires you to complete a few activities to learn about your performance.

**Training status:** Training status shows you how your training affects your fitness and performance. Your training status is based on changes to your training load and VO2 max. over an extended time period.

**VO2 max.:** VO2 max. is the maximum volume of oxygen (in milliliters) you can consume per minute per kilogram of body weight at your maximum performance. Your device displays heat and altitude corrected VO2 max. values when you are acclimating to high heat environments or high altitude.

**Training load:** Training load is the sum of your excess post-exercise oxygen consumption (EPOC) over the last 7 days. EPOC is an estimate of how much energy it takes for your body to recover after exercise.

**Training load focus:** Your device analyzes and distributes your training load into different categories based on the intensity and structure of each activity recorded. Training load focus includes the total load accumulated per category, and the focus of the training. Your device displays your load distribution over the last 4 weeks.

**Recovery time:** The recovery time displays how much time remains before you are fully recovered and ready for the next hard workout.

**Functional threshold power (FTP):** The device uses your user profile information from the initial setup to estimate your FTP. For a more accurate rating, you can conduct a guided test.

**HRV stress test:** The HRV (heart rate variability) stress test requires a Garmin® chest heart rate monitor. The device records your heart rate variability while standing still for 3 minutes. It provides your overall stress level. The scale is 1 to 100, and a lower score indicates a lower stress level.

**Performance condition:** Your performance condition is a real-time assessment after 6 to 20 minutes of activity. It can be added as a data field so you can view your performance condition during the rest of your activity. It compares your real-time condition to your average fitness level.

**Power curve:** The power curve displays your sustained power output over time. You can view your power curve for the previous month, three months, or twelve months.

### Training Status Levels

Training status shows you how your training affects your fitness level and performance. Your training status is based on changes to your VO2 max., acute load, and HRV status over an extended time period. You can use your training status to help plan future training and continue improving your fitness level.

**No Status:** The device needs you to record multiple activities over two weeks to determine your training status.

**Detraining:** You have a break in your training routine or you are training much less than usual for a week or more. Detraining means that you are unable to maintain your fitness level. You can try increasing your training load to see improvement.

**Recovery:** Your lighter training load is allowing your body to recover, which is essential during extended periods of hard training. You can return to a higher training load when you feel ready.

**Maintaining:** Your current training load is enough to maintain your fitness level. To see improvement, try adding more variety to your workouts or increasing your training volume.

**Productive:** Your current training load is moving your fitness level and performance in the right direction. You should plan recovery periods into your training to maintain your fitness level.

**Peaking:** You are in ideal race condition. Your recently reduced training load is allowing your body to recover and fully compensate for earlier training. You should plan ahead, since this peak state can only be maintained for a short time.

**Overreaching:** Your training load is very high and counterproductive. Your body needs a rest. You should give yourself time to recover by adding lighter training to your schedule.

**Unproductive:** Your training load is at a good level, but your fitness is decreasing. Try focusing on rest, nutrition, and stress management.



**Strained:** There is imbalance between your recovery and training load. It is a normal result after a hard training or major event. Your body may be struggling to recover, so you should pay attention to your overall health.

**Tips for Getting Your Training Status**

The training status feature depends on updated assessments of your fitness level, including at least one VO2 max. measurement per week. Your VO2 max. estimate is updated after both indoor and outdoor rides with power during which your heart rate reached at least 70% of your maximum heart rate for several minutes. To get the most out of the training status feature, you can try these tips.

- At least one time per week, ride with a power meter, and reach a heart rate higher than 70% of your maximum heart rate for at least 10 minutes.  
After using the device for one week, your training status should be available.
- Record all of your fitness activities on your primary training device, allowing your device to learn about your performance ([Syncing Activities and Performance Measurements, page 25](#)).

**About VO2 Max. Estimates**


VO2 max. is the maximum volume of oxygen (in milliliters) you can consume per minute per kilogram of body weight at your maximum performance. In simple terms, VO2 max. is an indication of athletic performance and should increase as your level of fitness improves. VO2 max. estimates are provided and supported by Firstbeat. You can use your Garmin® device paired with a compatible heart rate monitor and power meter to display your cycling VO2 max. estimate.

**Getting Your VO2 Max. Estimate**

Before you can view your VO2 max. estimate, you must put on the heart rate monitor, install the power meter, and pair them with your device ([Pairing Your Wireless Sensors, page 49](#)). If your device was packaged with a heart rate monitor, the device and sensor are already paired. For the most accurate estimate, complete the user profile setup ([Setting Up Your User Profile, page 57](#)), and set your maximum heart rate ([Setting Your Heart Rate Zones, page 27](#)).

**NOTE:** The estimate may seem inaccurate at first. The device requires a few rides to learn about your cycling performance.

- 1 Ride at a steady, high intensity for at least 20 minutes.
- 2 After your ride, select **Save**.
- 3 Select  > **My Stats** > **Training Status**.
- 4 Press  to view your VO2 max.  
Your VO2 max. estimate appears as a number and position on the color gauge.

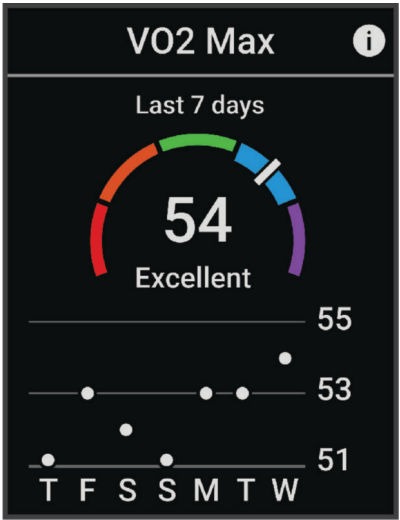

|                                                                                            |           |
|--------------------------------------------------------------------------------------------|-----------|
|  Purple | Superior  |
|  Blue   | Excellent |
|  Green  | Good      |
|  Orange | Fair      |
|  Red    | Poor      |



VO2 max. data and analysis is provided with permission from The Cooper Institute®. For more information, see the appendix ([VO2 Max. Standard Ratings, page 81](#)), and go to [www.CooperInstitute.org](http://www.CooperInstitute.org).

### Tips for Cycling VO2 Max. Estimates

The success and accuracy of the VO2 max. calculation improves when your ride is a sustained and moderately hard effort, and where heart rate and power are not highly variable.

- Before your ride, check that your device, heart rate monitor, and power meter are functioning properly, paired, and have good battery life.
- During your 20 minute ride, maintain your heart rate at greater than 70% of your maximum heart rate.
- During your 20 minute ride, maintain a fairly constant power output.
- Avoid rolling terrain.
- Avoid riding in groups where there is a lot of drafting.

### Heat and Altitude Performance Acclimation

Environmental factors such as high temperature and altitude impact your training and performance. For example, high altitude training can have a positive impact on your fitness, but you may notice a temporary VO2 max. decline while exposed to high altitudes. Your Edge® 550 device provides acclimation notifications and corrections to your VO2 max. estimate and training status when the temperature is above 22°C (72°F) and when the altitude is above 800 m (2625 ft.).

**NOTE:** The heat acclimation feature is available only for GPS activities and requires weather data from your connected phone.

### Acute Load

Acute load is a weighted sum of your excess post-exercise oxygen consumption (EPOC) for the last several days. The gauge indicates whether your current load is low, optimal, high, or very high. The optimal range is based on your individual fitness level and training history. The range adjusts as your training time and intensity increase or decrease.


### Viewing Your Acute Load

Before you can view your acute load estimate, you must put on the heart rate monitor, install the power meter, and pair them with your device ([Pairing Your Wireless Sensors, page 49](#)).

If your device was packaged with a heart rate monitor, the device and sensor are already paired. For the most accurate estimate, complete the user profile setup ([Setting Up Your User Profile, page 57](#)), and set your maximum heart rate ([Setting Your Heart Rate Zones, page 27](#)).

**NOTE:** The estimate may seem inaccurate at first. The device requires a few rides to learn about your cycling performance.

- 1 Ride at least once during a seven day period.
- 2 Select  > **My Stats** > **Training Status**.
- 3 Press  to view your acute load.

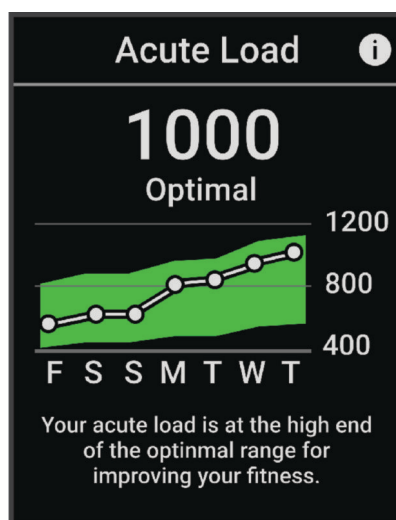

### Training Load Focus

In order to maximize performance and fitness gains, training should be distributed across three categories: low aerobic, high aerobic, and anaerobic. Training load focus shows you how much of your training is currently in

each category and provides training targets. Training load focus requires at least 7 days of training to determine if your training load is low, optimal, or high. After 4 weeks of training history, your training load estimate will have more detailed target information to help you balance your training activities.

**Below targets:** Your 4-week training load is lower than optimal in all intensity categories.

**Low aerobic shortage:** Try adding more low aerobic activities to provide recovery and balance for your higher intensity activities.

**High aerobic shortage:** Try adding more high aerobic activities to help improve your lactate threshold and VO2 max. over time.

**Anaerobic shortage:** Try adding a few more intense, anaerobic activities to improve your speed and anaerobic capacity over time.

**Balanced:** Your training load is balanced and provides all-around fitness benefits as you continue training.

**Low aerobic focus:** Your training load is mostly low aerobic activity. This provides a solid foundation and prepares you for adding more intense workouts.

**High aerobic focus:** Your training load is mostly high aerobic activity. These activities help to improve lactate threshold, VO2 max., and endurance.

**Anaerobic focus:** Your training load is mostly intense activity. This leads to rapid fitness gains, but should be balanced with low aerobic activities.

**Above targets:** Your 4-week training load is higher than optimal.

## Viewing Cycling Ability


Before you can view your cycling ability, you must have a 7-day training history, VO2 max. data recorded in your user profile ([About VO2 Max. Estimates, page 19](#)), and power curve data from a paired power meter ([Viewing Your Power Curve, page 25](#)).

Cycling ability is a measurement of your performance across three categories: aerobic endurance, aerobic capacity, and anaerobic capacity. Cycling ability includes your current rider type, such as climber. Information you enter in your user profile, such as body weight, also helps determine your rider type ([Setting Up Your User Profile, page 57](#)).

- 1 From the home screen, press  to view the cycling ability glance.

**NOTE:** You may need to add the glance to your home screen ([Viewing Glances, page 6](#)).

- 2 Select the cycling ability glance to view your current rider type.

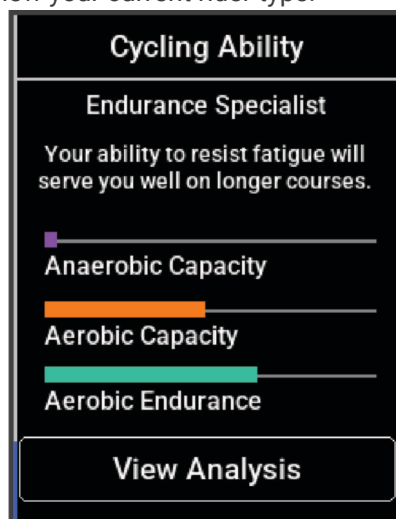

- 3 Select **View Analysis** to view a detailed analysis of your cycling ability.

## About Training Effect

Training Effect measures the impact of an activity on your aerobic and anaerobic fitness. Training Effect accumulates during the activity. As the activity progresses, the Training Effect value increases. Training Effect is determined by your user profile information and training history, and heart rate, duration, and intensity of your activity. There are seven different Training Effect labels to describe the primary benefit of your activity. Each label is color coded and corresponds to your training load focus ([Training Load Focus, page 20](#)). Each feedback phrase, for example, "Highly Impacting VO2 Max." has a corresponding description in your Garmin Connect™ activity details.

Aerobic Training Effect uses your heart rate to measure how the accumulated intensity of an exercise affects your aerobic fitness and indicates if the workout had a maintaining or improving effect on your fitness level. Your excess post-exercise oxygen consumption (EPOC) accumulated during exercise is mapped to a range of values that account for your fitness level and training habits. Steady workouts at moderate effort or workouts involving longer intervals (>180 seconds) have a positive impact on your aerobic metabolism and result in an improved aerobic Training Effect.

Anaerobic Training Effect uses heart rate and speed (or power) to determine how a workout affects your ability to perform at very high intensity. You receive a value based on the anaerobic contribution to EPOC and the type of activity. Repeated high-intensity intervals of 10 to 120 seconds have a highly beneficial impact on your anaerobic capability and result in an improved anaerobic Training Effect.

You can add Aerobic Training Effect and Anaerobic Training Effect as data fields to one of your training screens to monitor your numbers throughout the activity.

| Training Effect | Aerobic Benefit                                                    | Anaerobic Benefit                                                  |
|-----------------|--------------------------------------------------------------------|--------------------------------------------------------------------|
| From 0.0 to 0.9 | No benefit.                                                        | No benefit.                                                        |
| From 1.0 to 1.9 | Minor benefit.                                                     | Minor benefit.                                                     |
| From 2.0 to 2.9 | Maintains your aerobic fitness.                                    | Maintains your anaerobic fitness.                                  |
| From 3.0 to 3.9 | Impacts your aerobic fitness.                                      | Impacts your anaerobic fitness.                                    |
| From 4.0 to 4.9 | Highly impacts your aerobic fitness.                               | Highly impacts your anaerobic fitness.                             |
| 5.0             | Overreaching and potentially harmful without enough recovery time. | Overreaching and potentially harmful without enough recovery time. |

Training Effect technology is provided and supported by Firstbeat Analytics™. For more information, go to [firstbeat.com](http://firstbeat.com).


## Getting Your Exercise Load Estimate

Before you can view your exercise load estimate, you must put on the heart rate monitor, install the power meter, and pair them with your device ([Pairing Your Wireless Sensors, page 49](#)).

If your device was packaged with a heart rate monitor, the device and sensor are already paired. For the most accurate estimate, complete the user profile setup ([Setting Up Your User Profile, page 57](#)), and set your maximum heart rate ([Setting Your Heart Rate Zones, page 27](#)).

**NOTE:** The estimate may seem inaccurate at first. The device requires a few rides to learn about your cycling performance.

- 1 Ride at least once during a seven day period.
- 2 Select  > **My Stats** > **Training Status**.
- 3 Press  to view your exercise load.

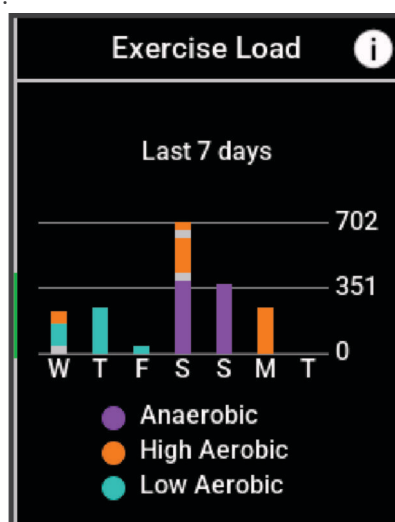

## Recovery Time

You can use your Garmin® device with wrist-based heart rate or a compatible chest heart rate monitor to display how much time remains before you are fully recovered and ready for the next hard workout.

The recovery time recommendation uses your VO2 max. estimate and may seem inaccurate at first. The device requires you to complete a few activities to learn about your performance.

The recovery time appears immediately following an activity. The time counts down until it is optimal for you to attempt another hard workout. The device updates your recovery time throughout the day based on changes in sleep, stress, relaxation, and physical activity.

**Viewing Your Recovery Time**


Before you can use the recovery time feature, you must have a Garmin® device with wrist-based heart rate or a compatible chest heart rate monitor paired with your device (*Pairing Your Wireless Sensors, page 49*). If your device was packaged with a heart rate monitor, the device and sensor are already paired. For the most accurate estimate, complete the user profile setup (*Setting Up Your User Profile, page 57*), and set your maximum heart rate (*Setting Your Heart Rate Zones, page 27*).

- 1 Select  > **My Stats** > **Recovery** >  > **Enable**.
  - 2 Go for a ride.
  - 3 After your ride, select **Save**.
- The recovery time appears. The maximum time is 4 days, and the minimum time is 6 hours.

**Getting Your FTP Estimate**

The device uses your user profile information from the initial setup to estimate your functional threshold power (FTP). For a more accurate FTP value, you can conduct an FTP test using a paired power meter and heart rate monitor.

- Select  > **My Stats** > **Power** > **FTP**.
- Your FTP estimate appears as a value measured in watts per kilogram, your power output in watts, and a position on the color gauge.

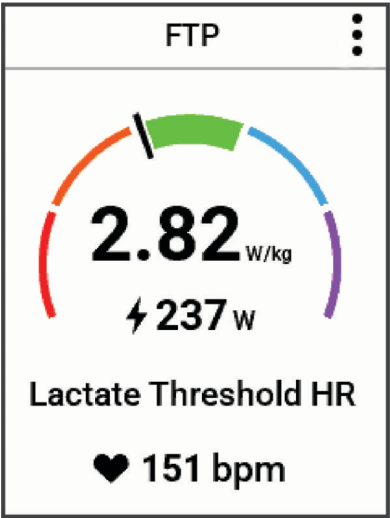

|                                                                                     |        |           |
|-------------------------------------------------------------------------------------|--------|-----------|
|  | Purple | Superior  |
|  | Blue   | Excellent |
|  | Green  | Good      |
|  | Orange | Fair      |
|  | Red    | Untrained |

For more information, see the appendix (*FTP Ratings, page 82*).

**Automatically Calculating FTP**

Before the device can calculate your functional threshold power (FTP), you must have a paired power meter and heart rate monitor (*Pairing Your Wireless Sensors, page 49*).

The estimate may seem inaccurate at first. The device requires a few rides to learn about your cycling performance.

- 1 Select  > **My Stats** > **Power** > **FTP** >  > **Auto Detect FTP**.
- 2 Ride at a steady, high intensity for at least 20 minutes outdoors.

3 After your ride, select **Save**.

4 Select **≡** > **My Stats** > **Power** > **FTP**.

Your FTP appears as a value measured in watts per kilogram, your power output in watts, and a position on the color gauge.

### Viewing Your Real-Time Stamina

Your device can provide real-time stamina estimates based on your heart rate data and VO2 max. estimate ([About VO2 Max. Estimates, page 19](#)). How hard you are working during an activity affects how quickly your stamina drains. Real-time stamina tracking works by combining your physiological metrics with your recent and long-term activity history, such as training duration, distance covered, and training load accumulation ([Performance Measurements, page 18](#)).

For best results, record cycling activities with a power meter consistently for 2 to 3 weeks and with different intensity levels and duration.

1 Select **≡** > **Activity Profiles**.

2 Select a biking profile.

3 Select **Data Screens**.

4 Scroll left or right to view the **Stamina** data screen.

5 Select **⚙**.

6 Select **Show Screen** to view the data screen during your ride.

7 Select **Show Current Effort** to select the stamina option.

8 Select **Show Distance** or **Show Time** as the primary data field.


9 Select **Edit Data Fields**.

10 Press **▲** or **▼** to change the layout.

11 Select **✓**.

12 Go for a ride ([Going for a Ride, page 8](#)).

13 Press **▲** or **▼** to view the data screen.

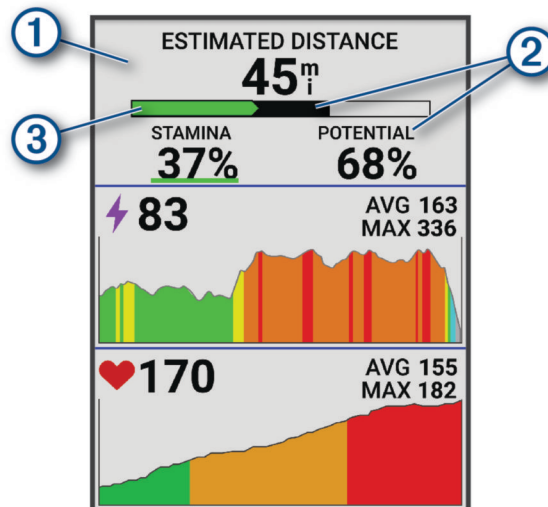

|   |                                                                                                                                                                                                                                                                                                                                                                                               |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ① | Primary stamina data field. You can view the estimated time or distance remaining until you will reach exhaustion at your current effort level.                                                                                                                                                                                                                                               |
| ② | Potential stamina estimate. Think of potential stamina as the total capacity of your fuel tank. It will decrease quickly if you are riding at a high effort level. Reducing your effort or resting results in a slower decline of your potential stamina.                                                                                                                                     |
| ③ | Current stamina estimate. Your current stamina reflects how much you have left in the tank at your current level of effort. This estimate combines general fatigue with anaerobic cycling activities, such as sprints, climbs, and attacks.<br><div> <div></div> Red: Stamina is depleting.<br/> <div></div> Orange: Stamina is steady.<br/> <div></div> Green: Stamina is recharging. </div> |

## Viewing Your Stress Score

Before you can view your stress score, you must put on a chest heart rate monitor and pair it with your device ([Pairing Your Wireless Sensors, page 49](#)).

Stress score is the result of a three-minute test performed while standing still, where the Edge® device analyzes heart rate variability to determine your overall stress. Training, sleep, nutrition, and general life stress all impact how an athlete performs. The stress score range is 1 to 100, where 1 is a very low stress state, and 100 is a very high stress state. Knowing your stress score can help you decide if your body is ready for a tough workout or yoga.

**TIP:** Garmin® recommends that you measure your stress score at approximately the same time and under the same conditions every day.

- 1 Select  > **My Stats** > **Stress Score** > .
- 2 Stand still, and rest for 3 minutes.

## Viewing Your Power Curve

Before you can view your power curve, you must pair your power meter with your device ([Pairing Your Wireless Sensors, page 49](#)).

The power curve displays your sustained power output over time. You can view your power curve for the previous month, three months, or twelve months.

- 1 Select  > **My Stats** > **Power**.
- 2 Press  to view your power curve.
- 3 Select  to select a time period.
- 4 Select a time period.

## Syncing Activities and Performance Measurements

You can sync activities and performance measurements from other Garmin® devices to your Edge® 550 bike computer using your Garmin Connect™ account. This allows your device to more accurately reflect your training status and fitness. For example, you can record a run with a Forerunner® watch, and view your activity details and overall training load on your Edge 550 bike computer.

Sync your Edge 550 bike computer and other Garmin devices to your Garmin Connect account.

**TIP:** You can set a primary training device and primary wearable in the Garmin Connect app ([Unified Training Status, page 46](#)).

Recent activities and performance measurements from your other Garmin devices appear on your Edge 550 bike computer.

## Turning Off Performance Notifications

Performance notifications are turned on by default. Some performance notifications are alerts that appear upon completion of your activity. Some performance notifications appear during an activity or when you achieve a new performance measurement, such as a new VO2 max. estimate.

- 1 Select  > **My Stats** > **Performance Notifications**.
- 2 Select an option.

## Pausing Your Training Status

If you are injured or sick, you can pause your training status. You can continue to record fitness activities, but your training status, training load focus, recovery feedback, and workout recommendations are temporarily disabled.

Select an option:

- From your Edge® bike computer, select  > **My Stats > Training Status : Pause Training Status.**
- From your Garmin Connect™ settings, select **Performance Stats > Training Status > ⋮ > Pause Training Status.**

**TIP:** You should sync your device with your Garmin Connect account.

## Resuming Your Paused Training Status

You can resume your training status when you are ready to start training again. For best results, you need at least two VO2 max. measurements each week ([About VO2 Max. Estimates, page 19](#)).

Select an option:

- From your Edge® bike computer, select  > **My Stats > Training Status > ⋮ > Resume Training Status.**
- From your Garmin Connect™ settings, select **Performance Stats > Training Status > ⋮ > Resume Training Status.**

**TIP:** You should sync your device with your Garmin Connect account.

## Viewing Your Fitness Age

Before the device can calculate an accurate fitness age, you must complete the user profile setup in the Garmin Connect™ app.

Your fitness age gives you an idea of how your fitness compares with a person of the same sex. Your device uses information, such as your age, body mass index (BMI), resting heart rate data, and vigorous activity history to provide a fitness age. If you have an Index™ scale, your device uses the body fat percentage metric instead of BMI to determine your fitness age. Exercise and lifestyle changes can impact your fitness age.

Select  > **My Stats > Fitness Age.**

## Viewing Intensity Minutes

Before the device can calculate your intensity minutes, you must pair your device and go for a ride with a compatible heart rate monitor ([Pairing Your Wireless Sensors, page 49](#)).

To improve your health, organizations such as the World Health Organization recommend at least 150 minutes per week of moderate intensity activity or 75 minutes per week of vigorous intensity activity. The Edge® bike computer, when paired with a heart rate monitor, tracks your time spent participating in moderate to vigorous activities, your weekly intensity minutes goal, and progress toward your goal.

Select  > **My Stats > Intensity Minutes.**

## Personal Records

When you complete a ride, the device displays any new personal records you achieved during that ride. Personal records include your fastest time over a standard distance, longest ride, and most ascent gained during a ride. When paired with a compatible power meter, the device displays the maximum power reading recorded during a 20-minute period.

### Viewing Your Personal Records

- 1 Hold .
- 2 Select **My Stats > Personal Records.**

### Reverting a Personal Record

You can set each personal record back to the one previously recorded.

- 1 Select  > **My Stats > Personal Records.**
- 2 Select a record to revert.
- 3 Select **Previous Record > ✓.**

**NOTE:** This does not delete any saved activities.

### Deleting a Personal Record

- 1 Select  > **My Stats > Personal Records.**



- 2 Select a personal record.
- 3 Select  > .

## Training Zones

- Heart rate zones ([Setting Your Heart Rate Zones, page 27](#))
- Power zones ([Setting Your Power Zones, page 27](#))

### Setting Your Heart Rate Zones

The device uses your user profile information from the initial setup to determine your heart rate zones. You can manually adjust the heart rate zones according to your fitness goals ([Fitness Goals, page 27](#)). For the most accurate calorie data during your activity, you should set your maximum heart rate, resting heart rate, and heart rate zones.

- 1 Select  > **My Stats** > **Training Zones** > **Heart Rate Zones**.
- 2 Enter your maximum, lactate threshold, and resting heart rate values.  
You can use the auto detect feature to automatically detect your heart rate during an activity. The zone values update automatically, but you can also edit each value manually.
- 3 Select **Based On:**.
- 4 Select an option:
  - Select **BPM** to view and edit the zones in beats per minute.
  - Select **% Max.** to view and edit the zones as a percentage of your maximum heart rate.
  - Select **% HRR** to view and edit the zones as a percentage of your heart rate reserve (maximum heart rate minus resting heart rate).
  - Select **%LTHR** to view and edit the zones as a percentage of your lactate threshold heart rate.

### About Heart Rate Zones

Many athletes use heart rate zones to measure and increase their cardiovascular strength and improve their level of fitness. A heart rate zone is a set range of heartbeats per minute. The five commonly accepted heart rate zones are numbered from 1 to 5 according to increasing intensity. Generally, heart rate zones are calculated based on percentages of your maximum heart rate.

### Fitness Goals

Knowing your heart rate zones can help you measure and improve your fitness by understanding and applying these principles.

- Your heart rate is a good measure of exercise intensity.
- Training in certain heart rate zones can help you improve cardiovascular capacity and strength.

If you know your maximum heart rate, you can use the table ([Heart Rate Zone Calculations, page 82](#)) to determine the best heart rate zone for your fitness objectives.

If you do not know your maximum heart rate, use one of the calculators available on the Internet. Some gyms and health centers can provide a test that measures maximum heart rate. The default maximum heart rate is 220 minus your age.

### Setting Your Power Zones

The values for the zones are default values and may not match your personal abilities. You can manually adjust your zones on the device or using Garmin Connect™. If you know your functional threshold power (FTP) value, you can enter it and allow the software to calculate your power zones automatically.

- 1 Select  > **My Stats** > **Training Zones** > **Power Zones**.
- 2 Enter your FTP value.
- 3 Select **Based On:**.
- 4 Select an option:
  - Select **watts** to view and edit the zones in watts.
  - Select **% FTP** to view and edit the zones as a percentage of your functional threshold power.
  - Select **Configuration** to edit the number of power zones.

# Navigation

Navigation features and settings also apply to navigating courses ([Courses, page 32](#)) and segments ([Segments, page 13](#)).

- Locations and finding places ([Locations, page 28](#))
- Planning a course ([Courses, page 32](#))
- Route settings ([Route Settings, page 36](#))
- Map settings ([Map Settings, page 35](#))

## Locations

You can record and store locations in the device.

### Marking Your Location

Before you can mark a location, you must locate satellites.

If you want to remember landmarks or return to a certain spot, you can mark a location.

- 1 Go for a ride.
- 2 Select **Navigation** >  > **Mark Location** > .


### Saving Locations from the Map

- 1 Select **Navigation** > **Browse Map**.
- 2 Press  and  to browse the map for the location.  
**TIP:** Press  to toggle between map browsing tools. Location information appears at the top of the map.
- 3 Hold .  
Location options appear in a list.
- 4 Select the location.
- 5 Select **Save Location** > .

### Navigating to a Location

**TIP:** You can use the Location Search glance to enter specific search information from the home screen. You may need to add the glance to the home screen ([Customizing the Glances, page 64](#)).

- 1 Select **Navigation**.
- 2 Select an option:
  - Select **Browse Map** to navigate to a location on the map.
  - Select **Courses** to navigate using a saved course ([Courses, page 32](#)).
  - Select **MTB Trail Navigation** to navigate to a mountain bike trail network.
  - Select **Categories** to navigate to a point of interest, city, or map point.
  - Select **Saved Locations** to navigate to a saved location.
  - Select **Recent Finds** to navigate to one of the last 50 locations you have found.
  - Select  > **Searching near:** to narrow your search area.
- 3 Select a location.
- 4 Select **Ride**.
- 5 Follow the on-screen instructions to proceed to your destination.

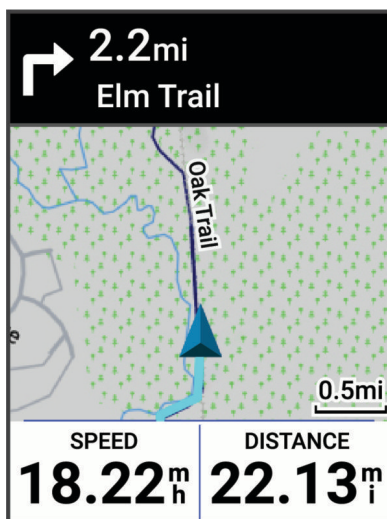

### Navigating Back to Start

At any point during your ride, you can return to the starting point.


- 1 Go for a ride.
- 2 Press **▶ > ⋮** to view the shortcut menu.
- 3 Select **Back to Start**.
- 4 Select **Along Same Route** or **Most Direct Route**.
- 5 Select **Ride**.

The device navigates you back to the starting point of your ride.

### Starting a Ride From a Shared Location

You can use the Garmin Connect™ app to share a location from Apple® Maps to your Edge® bike computer, and navigate to that location ([Sharing a Location From a Map Using the Garmin Connect™ App, page 31](#)).

- 1 Select the shared location information from the dynamic area on the home screen ①.

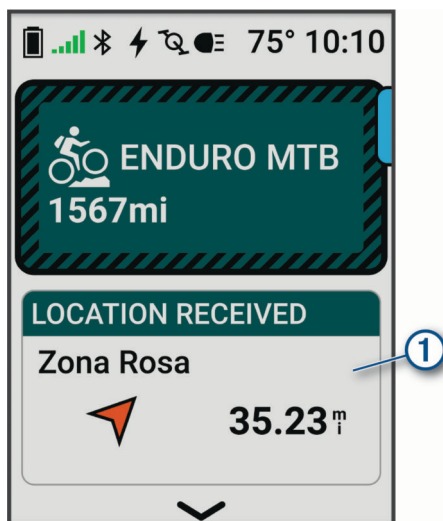

Your Edge bike computer displays a map with the shared location name and its coordinates.

**TIP:** The location is saved in the **Navigation > Recent Finds** menu.

- 2 Select **Ride**.



- 3 Follow the on-screen instructions to proceed to your destination.

### Navigating to a Shared Location During a Ride


This feature is designed for rides using GPS. If you are riding with an Indoor activity profile where navigation is disabled, select ✓ to dismiss the notification.

**TIP:** The location is saved in the **Navigation > Recent Finds** menu.

You can receive shared locations on your Edge® bike computer and navigate to those locations ([Sharing a Location From a Map Using the Garmin Connect™ App, page 31](#)).

- 1 Start a ride ([Going for a Ride, page 8](#)).

Your Edge bike computer displays a notification indicating the name of a shared location.

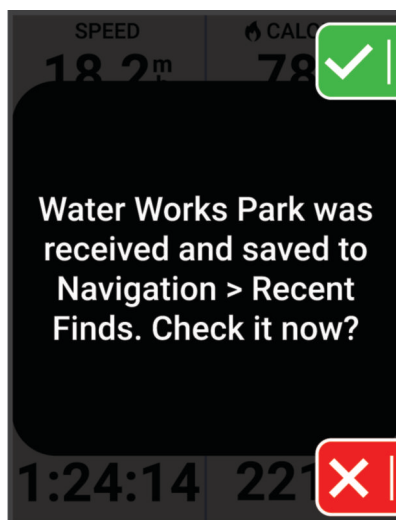

- 2 Select ✓ to navigate to the shared location.
- 3 Follow the on-screen instructions to proceed to your destination.

### Stopping Navigation

- 1 Press ⋮.
- 2 Select **Stop Navigation > ✓**.

### Editing Locations

- 1 Select **Navigation > Saved Locations**.
- 2 Select a location.
- 3 Select **Details**.
- 4 Select **Edit**.
- 5 Select an option.

For example, select Change Elevation to enter a known altitude for the location.

- 6 Enter the new information, and select ✓.

### Deleting a Location

- 1 Select **Navigation** > **Saved Locations**.
- 2 Select a location.
- 3 Select **Details**.
- 4 Select **Edit** > **Delete Location** > ✓.

### Sharing a Location From a Map Using the Garmin Connect™ App

#### NOTICE

It is your responsibility to use discretion when sharing location information with others. Always ensure you are aware of and comfortable with the individual with whom you share location information.

**NOTE:** This feature is available only if your course-compatible Garmin® device is connected to an iPhone® device using Bluetooth® technology.

You can share location information and data from Apple® Maps to your compatible Garmin device.

- 1 From Apple Maps, select a location.
- 2 Select  > .
- 3 If necessary, from the Garmin Connect app, select the Garmin device.  
A notification appears in the Garmin Connect app indicating that the location is now available on your device ([Starting a Ride From a Shared Location](#), page 29).

### Reporting a Hazard


#### ⚠ WARNING

This feature allows users to submit information about potential hazards on their ride. Garmin® makes no representations about the accuracy, completeness, or timeliness of information submitted by users. Remain aware of your surroundings and defer to any posted guidance available during your ride. Failure to remain aware of your surroundings could result in property damage or personal injury.

At any point during your ride, you can report a hazard that might be hazardous to cyclists, such as potholes, unleashed dogs, or fallen trees. You can also confirm a hazard on the Edge® bike computer, or report that a hazard is no longer present. Hazards expire after they have not been reported for a period of time.

- 1 Go for a ride ([Going for a Ride](#), page 8).
- 2 From the map screen, press .
- 3 Select .
- 4 Select the type of hazard.
- 5 Select **Report**.

The hazard appears on the navigation map, and the Edge bike computer gives an audible alert ([Alerts and Prompts Settings](#), page 60).

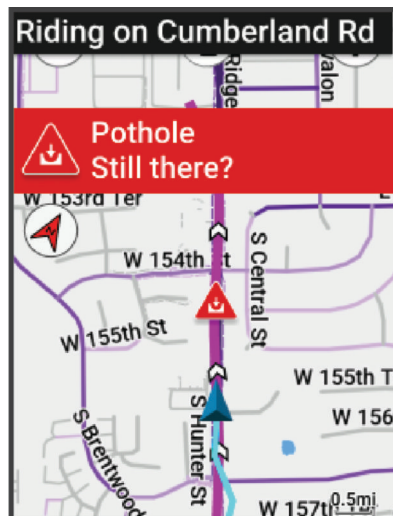

## Courses

### WARNING

This feature allows users to download routes created by other users. Garmin® makes no representations about the safety, accuracy, reliability, completeness, or timeliness of routes created by third parties. Any use or reliance on routes created by third parties is at your own risk.

You can send a course from your Garmin Connect™ account to your device. After it is saved to your device, you can navigate the course on your device. You can also create a custom course on your device.

You can follow a saved course simply because it is a good route. For example, you can save and follow a bike friendly commute to work. You can also follow a saved course, trying to match or exceed previously set performance goals.

### Creating a Course on Your Device

Before you can create a course, you must have an activity with GPS data saved to your device.

You can also create a course in the Garmin Connect™ app ([Following a Course From Garmin Connect™](#), page 32).

- 1 Select **Navigation > Courses > Create New**.
- 2 Select an activity on which to base your course.
- 3 Select **Save as Course**.
- 4 Enter a name for the course, and select .
- 5 Select .  
The course appears in the list.
- 6 Select the course, and review the course details.
- 7 If necessary, select  to edit the course details.  
For example, you can change the name or color of the course, or create a GroupRide session ([Starting a GroupRide Session](#), page 41).
- 8 Select **Ride**.

### Creating a Course from a Recent Ride

You can create a new course from a ride you saved on this Edge® device.

- 1 Select **History > Rides**.
- 2 Select a ride.
- 3 Select  > **Save Ride as Course**.
- 4 Enter a name for the course, and select .

### Following a Course From Garmin Connect™

Before you can download a course from Garmin Connect, you must have a Garmin Connect account ([Garmin Connect](#), page 45).

- 1 Select an option:
  - Open the Garmin Connect app.
  - Go to [connect.garmin.com](https://connect.garmin.com).
- 2 Create and save a new course, or select an existing course.
- 3 Select an option:
  - On the Garmin Connect app, select .
  - On the Garmin Connect website, select **Send to Device**.
- 4 Select your Edge® bike computer.
- 5 Select an option:
  - Sync your device with the Garmin Connect app.
  - Sync your device using the Garmin Express™ application.

On your device, the course appears on the dynamic area of the home screen.

- 6 Select the course.  
**NOTE:** If necessary, you can select **Navigation > Courses** to select a different course.
- 7 Select **Ride**.

## Tips for Riding a Course

- Use turn guidance ([Course Options, page 33](#)).
- If you include a warmup, press  to begin the course, and warm up as normal.
- Stay away from your course path as you warm up.  
When you are ready to begin, head toward your course. When you are on any part of the course path, a message appears.
- Scroll to the map to view the course map.  
If you stray from the course, a message appears.

## Viewing Course Details

1 Select **Navigation > Courses**.

2 Select a course.

3 Select an option:

**NOTE:** Not all options are available for all courses.

- Select the course to view the course on the map.
- Select the climbs graph to view details and elevation plots for each climb.
- Select **Summary** to view details about the course.
- Select **Course Demands** to view an analysis of your cycling ability for the course.
- Select **Power Guide** to view an analysis of your effort for the course ([Power Guide, page 10](#)).
- Select **Nutrition/Hydration** to enable and view nutrition and hydration recommendations for the course.

## Displaying a Course on the Map

For each course saved to your device, you can customize how it appears on the map. For example, you can set your commute course to always display on the map in yellow. You can have an alternate course display in green. This allows you to see the courses while you are riding, but not follow or navigate a particular course.

1 Select  > **Navigation > Courses**.

2 Select the course.

3 Select .

4 Select **Always Display** to make the course appear on the map.

5 Select **Color**, and select a color.

6 Select **Course Points** to include course points on the map.

The next time you ride near the course, it appears on the map.

## Course Options

Select **Navigation > Courses > .**

**Turn Guidance:** Enables or disables turn prompts.

**Off Course Warnings:** Alerts you if you stray from the course.

**Search:** Allows you to search for saved courses by name.

**Sort:** Allows you to sort saved courses by name, distance, or date.

**Delete:** Allows you to delete all or multiple saved courses from the device.

## Rerouting a Course

You can choose how the device recalculates the route when you go off course.

When you go off course, select an option:

- To pause navigation until you get back on course, select **Pause Navigation**.
- To choose from rerouting suggestions, select **Re-route**.

The first rerouting option is the shortest route back to the course and starts automatically after 10 seconds.

## Stopping a Course

1 Scroll to the map.

2 Press .

3 Select **Stop Course > .**

## Deleting a Course

1 Select **Navigation > Courses**.



- 2 Select > **Delete**.
- 3 Select a course.
- 4 Select .


## Trailforks Routes

With the Trailforks app, you can save your favorite trail routes or browse for routes nearby. You can download Trailforks mountain bike trail routes to your Edge® bike computer. Downloaded routes appear in the saved courses list.

To sign up for a Trailforks membership, go to [www.trailforks.com](http://www.trailforks.com).

## ForkSight

While navigating a bike trail on a Trailforks map, ForkSight offers riders information about trails at each intersection, helping users navigate within trail networks. When stopped on a bike trail during an activity, the ForkSight page appears with information about upcoming trail options, such as guidance instruction, ascent and descent, and an elevation profile.

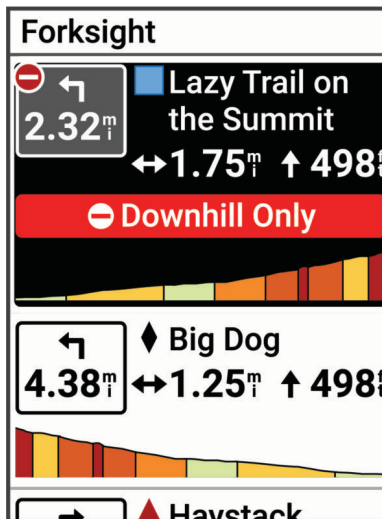


## Using ClimbPro

The ClimbPro feature helps you manage your effort for upcoming climbs. You can view details about the climbs, including when they occur, average gradient, and total ascent. The climb scores, based on length and gradient, are indicated by color.

- 1 Enable the ClimbPro feature for the activity profile (*Training Settings, page 57*).
  - 2 Select **Climb Detection**.
  - 3 Select the climb categories to include, based on difficulty (*Climb Categories, page 35*).
  - 4 Select **Mode**.
  - 5 Select an option:
    - Select **When Navigating** to use ClimbPro only when you are following a course (*Courses, page 32*) or navigating to a destination (*Navigating to a Location, page 28*).
    - Select **Always** to use ClimbPro with all rides.
  - 6 Select **Terrain Type**, and select an option.
  - 7 Review the climbs in the climb explore widget (*Using the Climb Explore Widget, page 35*).
- TIP:** Climbs also appear in the course details (*Viewing Course Details, page 33*).

- 8 Go for a ride.

At the start of a climb, the ClimbPro screen appears automatically.

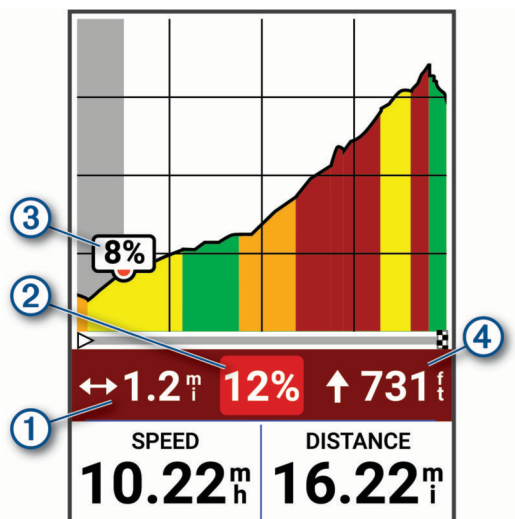

|   |                                                 |
|---|-------------------------------------------------|
| ① | Distance remaining in the current climb         |
| ② | Average gradient remaining in the current climb |
| ③ | Current gradient                                |
| ④ | Ascent remaining in the current climb           |

After you save the ride, you can view the climb splits in your ride history.

### Using the Climb Explore Widget

- 1 Scroll to the climb explore widget.

**TIP:** You can add the climb explore widget to the widget loop (*Customizing the Widget Loop*, page 64).

- 2 Select .

- 3 Select an option:

- Select **Search Radius** to enter the distance to search for climbs.
- Select **Min Difficulty** to set the minimum climb category (*Climb Categories*, page 35).
- Select **Max Difficulty** to set the maximum climb category (*Climb Categories*, page 35).
- Select **Terrain Type** to indicate what type of terrain you will be riding on.
- Select **Sort by** to sort the climbs by distance, ascent, length, or grade.
- Select **Sort Order** to sort the climbs in ascending or descending order.

### Climb Categories

Climb categories are determined by climb score, which is calculated using the grade multiplied by the length of the climb. A climb must have a length of at least 500 meters and an average grade of at least 3 percent to be considered a climb.

| Category           | Climb Score         | Color                                                                                 |
|--------------------|---------------------|---------------------------------------------------------------------------------------|
| Hors Category (HC) | Greater than 80,000 |  |
| Category 1         | Greater than 64,000 |  |
| Category 2         | Greater than 32,000 |  |
| Category 3         | Greater than 16,000 |  |
| Category 4         | Greater than 8,000  |  |
| Uncategorized      | Greater than 1,500  |  |

### Map Settings

Select  > **Activity Profiles**, select a profile, and select **Navigation** > **Map**.

**Orientation:** Sets how the map is shown on the page.

**Auto Zoom:** Automatically selects a zoom level for the map. When Off is selected, you must zoom in or out manually.

**Guide Text:** Sets when the turn-by-turn navigation prompts are shown (requires routable maps).

**Appearance:** Customizes the appearance settings on the map ([Map Appearance Settings, page 36](#)).

**Configure Maps:** Enables or disables the maps currently loaded on the device.

## Map Appearance Settings

Select  > **Activity Profiles**, select a profile, and select **Navigation > Map > Appearance**.

**Popularity Map:** Highlights popular roads or trails for your ride type. The darker the road or trail, the more popular.

**High Contrast:** Sets the map to display data with higher contrast, for better visibility in challenging environments.

**Map Detail:** Sets the level of detail shown on the map.

**Color Mode:** Adjusts the appearance of the map for your ride type.

**History Line Color:** Allows you to change the line color of the path you have traveled.

**Advanced:** Allows you to set zoom levels and text size, and enable shaded relief and contours.

**Reset Map Default:** Resets the map appearance to the default settings.

## Changing the Map Orientation

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Navigation > Map > Orientation**.
- 4 Select an option:
  - Select **North Up** to show north at the top of the page.
  - Select **Track Up** to show your current direction of travel at the top of the page.

## Managing Maps

Before you can manage your map data, you must connect to a Wi-Fi® network.

You can view and update the downloaded maps on your Edge® bike computer.

- 1 Select  > **System > Map Manager**.
- 2 Select an option:
  - Select a current map, and select **Download Update** or **Check for Updates**.
  - Select **Add Maps** to download a new map.

## Route Settings

Select  > **Activity Profiles**, select a profile, and select **Navigation > Routing**.

**Popularity Routing:** Calculates routes based on the most popular rides from Garmin Connect™.

**Routing Mode:** Sets the transportation method to optimize your route.

**Calculation Method:** Sets the method used to calculate your route.

**Lock on Road:** Locks the position icon, which represents your position on the map, onto the nearest road.

**Avoidance Setup:** Sets the road types to avoid while navigating.

**Course Recalculation:** Automatically recalculates the route when you deviate from the course.

**Route Recalculation:** Automatically recalculates the route when you deviate from the route.

## Selecting an Activity for Route Calculation

You can set the device to calculate the route based on activity type.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Navigation > Routing > Routing Mode**.
- 4 Select an option to calculate your route.

For example, you can select Road Cycling for on-road navigation or Mountain Biking for off-road navigation.

## Connected Features

### WARNING

While cycling, do not interact with the display to enter information or to read or reply to messages, because doing so can cause a distraction that could lead to an accident causing serious personal injury or death.

Connected features are available for your Edge® bike computer when you connect the bike computer to a Wi-Fi® network or to a compatible phone using Bluetooth® technology.

### Pairing Your Phone

To use the connected features of the Edge® bike computer, it must be paired directly through the Garmin Connect™ app, instead of from the Bluetooth® settings on your phone.

- 1 Hold  to turn on the device.
- 2 If this is the first time you have turned on the device, select a device language.  
The next screen prompts you to pair with your phone.
- 3 Scan the QR code with your phone, and follow the on-screen instructions to complete the pairing and setup process.

**NOTE:** Based on your Garmin Connect account and accessories, your device may suggest activity profiles and data fields during setup. If you have sensors paired with your previous device, you can transfer them during setup.

Setting up Wi-Fi® and sleep mode usage on your device enables the device to sync with all your data such as training stats, course downloads, and software updates.

- 4 If necessary, to manually enter pairing mode, hold , and select **Connected Features > Phone > Pair Smartphone**.

If you are pairing a new phone, select the name of the previously paired phone, and select  to forget the phone. **Pair Smartphone** appears after you forget the previously paired phone.

After you pair successfully, a message appears, and your bike computer syncs automatically with your phone.

### Bluetooth® Connected Features

The Edge® device has several Bluetooth connected features for your compatible phone using the Garmin Connect™ and Connect IQ™ apps. Go to [garmin.com/apps](https://garmin.com/apps) for more information.

**Activity uploads to Garmin Connect:** Automatically sends your activity to Garmin Connect as soon as you finish recording the activity.

**Audio prompts:** Allows the Garmin Connect app to play status announcements on your phone during a ride.

**Bike alarm:** Allows you to enable an alarm that sounds on the device and sends an alert to your phone when the device detects motion.

**Connect IQ downloadable features:** Allows you to download Connect IQ features from the Connect IQ app.

**Course, segment, and workout downloads from Garmin Connect:** Allows you to search for activities on Garmin Connect using your phone and send them to your device.

**Course and segment downloads from Garmin Connect:** Allows you to search for courses and segments on Garmin Connect using your phone and send them to your device.

**Device to device transfers:** Allows you to wirelessly transfer files to another compatible Edge device.

**Find my Edge:** Locates your lost Edge device that is paired with your phone and currently within range.

**Messages:** Allows you to reply to an incoming call or text message with a preset text message. This feature is available with compatible Android™ phones.

**Notifications:** Displays phone notifications and messages on your device.

**Safety and tracking features:** ([Safety and Tracking Features, page 37](#))

**Social media interactions:** Allows you to post an update to your favorite social media website when you upload an activity to Garmin Connect.

**Weather updates:** Sends real-time weather conditions and alerts to your device.

### Safety and Tracking Features

### CAUTION

The safety and tracking features are supplemental features and should not be relied on as a primary method to obtain emergency assistance. The Garmin Connect™ app does not contact emergency services on your behalf.

## NOTICE

To use these features, the Edge® 550 device must have GPS enabled and be connected to the Garmin Connect app using Bluetooth® technology. You can enter emergency contacts in your Garmin Connect account.

The Edge 550 device has safety and tracking features that must be set up with the Garmin Connect app.

For more information about safety and tracking features, go to [garmin.com/safety](https://garmin.com/safety).

**Assistance:** Allows you to send a message with your name, LiveTrack link, and GPS location (if available) to your emergency contacts.

**Incident detection:** When the Edge 550 device detects an incident during certain outdoor activities, the device sends an automated message, LiveTrack link, and GPS location (if available) to your emergency contacts.

**LiveTrack:** Allows friends and family to follow your races and training activities in real time. You can invite followers using email or social media, allowing them to view your live data on a web page.

**GroupRide:** Allows you to create and access shared courses, group messaging, and live location data with other riders.

**GroupTrack:** Allows you to keep track of your connections using LiveTrack directly on screen and in real time.

### Incident Detection

## ⚠ CAUTION

Incident detection is a supplemental feature available only for certain outdoor activities. Incident detection should not be relied on as a primary method to obtain emergency assistance. The Garmin Connect™ app does not contact emergency services on your behalf.

## NOTICE

Before you can enable incident detection on your device, you must set up emergency contact information in the Garmin Connect app. Your paired phone must be equipped with a data plan and be in an area of network coverage where data is available. Your emergency contacts must be able to receive text messages (standard text messaging rates may apply).

When an incident is detected by your Edge® device with GPS enabled, the Garmin Connect app can send an automated text message and email with your name and GPS location, if available, to your emergency contacts. A message appears on your device and paired phone indicating your contacts will be informed after 30 seconds have elapsed. If assistance is not needed, you can cancel the automated emergency message.

### Turning Incident Detection On and Off

**NOTE:** Your paired phone must be equipped with a data plan and be in an area of network coverage where data is available.

- 1 Select  > **Safety & Tracking > Incident Detection.**
- 2 Select the activity profile to enable incident detection.

**NOTE:** Incident detection is enabled by default for certain outdoor activities. Depending on the terrain and your riding style, false positives can occur.

### Assistance

## ⚠ CAUTION

Assistance is a supplemental feature and should not be relied on as a primary method to obtain emergency assistance. The Garmin Connect™ app does not contact emergency services on your behalf.

## NOTICE

Before you can enable the assistance feature on your device, you must set up emergency contact information in the Garmin Connect app. Your paired phone must be equipped with a data plan and be in an area of network coverage where data is available. Your emergency contacts must be able to receive text messages (standard text messaging rates may apply).

When your Edge® device with GPS enabled is connected to the Garmin Connect app, you can send an automated text message with your name and GPS location, if available, to your emergency contacts.

A message appears on your device indicating your contacts will be informed after a countdown has elapsed. If assistance is not needed, you can cancel the message.

### Requesting Assistance

## NOTICE

Before you can request assistance, you must enable GPS on your Edge® device and set up emergency contact information in the Garmin Connect™ app. Your paired phone must be equipped with a data plan and be in an

area of network coverage where data is available. Your emergency contacts must be able to receive emails or text messages (standard text messaging rates may apply).

- 1 Hold  for five seconds to activate the assistance feature.  
The device beeps and sends the message after the five-second countdown is complete.  
**TIP:** You can select  before the countdown is complete to cancel the message.
- 2 If necessary, select **Send** to send the message immediately.

### Adding Emergency Contacts

Emergency contact phone numbers are used for the safety and tracking features.

- 1 From the Garmin Connect™ app, select •••.
- 2 Select **Safety & Tracking > Safety Features > Emergency Contacts > Add Emergency Contacts**.
- 3 Follow the on-screen instructions.

Your emergency contacts receive a notification when you add them as an emergency contact, and can accept or decline your request. If a contact declines, you must choose another emergency contact.

### Viewing Your Emergency Contacts

Before you can view your emergency contacts on your device, you must set up your rider information and emergency contacts in the Garmin Connect™ app.

Select  > **Safety & Tracking > Emergency Contacts**.

Your emergency contacts' names and phone numbers appear.

### Cancelling an Automated Message

When an incident is detected by your device, you can cancel the automated emergency message on your device or your paired phone before it is sent to your emergency contacts.

Hold , and select  before the end of the 30-second countdown.

### Sending a Status Update After an Incident

Before you can send a status update to your emergency contacts, your device must detect an incident and send an automated emergency message to your emergency contacts.

You can send a status update to your emergency contacts informing them you are not in need of assistance.

From the status page, select **Incident Detected > I'm Okay**.

A message is sent to all emergency contacts.

### LiveTrack

#### NOTICE

It is your responsibility to use discretion when sharing location information with others. Always ensure you are aware of and comfortable with the rider with whom you share your location information.

The LiveTrack feature lets you share your cycling activities with contacts from your phone and your social media accounts. While you are sharing, viewers can track your current location and view your live data on a web page in real time.

To use this feature, the Edge® 550 device must have GPS enabled and be connected to the Garmin Connect™ app using Bluetooth® technology.

### Turning On LiveTrack

Before you can start your first LiveTrack session, you must set up contacts in the Garmin Connect™ app.

- 1 Select  > **Safety & Tracking > LiveTrack**.
- 2 Select an option:
  - Select **Auto Start** to start a LiveTrack session each time you start this type of activity.
  - Select **LiveTrack Name** to update the name of your LiveTrack session. The current date is the default name.
  - Select **Recipients** to view recipients.
  - Select **Course Sharing** if you want your recipients to see your course.
  - Select **Spectator Messaging** if you want to allow your recipients to send you text messages during your cycling activity ([Spectator Messaging, page 44](#)).
  - Select **Extend LiveTrack** to extend viewing of the LiveTrack session for 24 hours.
- 3 Select **Start LiveTrack**.

Recipients can view your live data on a Garmin Connect tracking page.



## Starting a GroupTrack Session


Before you can start a GroupTrack session, you must have a phone with the Garmin Connect™ app paired to your device ([Pairing Your Phone, page 37](#)).

This feature is required for group rides with the Edge® 530, and earlier bike computers.

For Edge 1040, 840, 540 and later bike computers, use the GroupRide feature ([Starting a GroupRide Session, page 41](#)).

During a ride, you can see the riders in your GroupTrack session on the map.

- 1 On the Edge bike computer, select  > **Safety & Tracking** > **LiveTrack** > **GroupTrack** to enable viewing connections on the map screen and message notifications.
- 2 From the Garmin Connect app, select  > **Safety & Tracking** > **LiveTrack** > **Sharing Settings** > **GroupTrack** > **All Connections**.
- 3 Select **Start LiveTrack**.
- 4 On the Edge bike computer, press , and go for a ride.
- 5 Scroll to the map to view your connections.

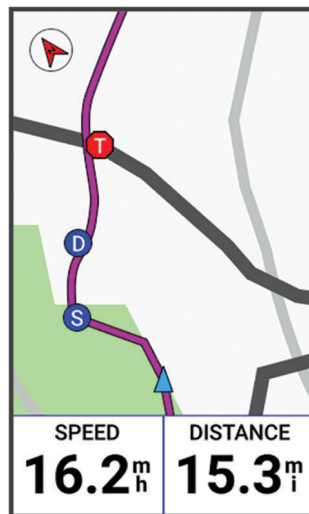

- 6 Scroll to the GroupTrack list.

You can select a rider from the list, and that rider appears centered on the map.

### Tips for GroupTrack Sessions

The GroupTrack feature allows you to keep track of other riders in your group using LiveTrack directly on the screen. All riders in the group must be your connections in your Garmin Connect™ account.

- Ride outside using GPS.
- Pair your Edge® 550 bike computer with your phone using Bluetooth® technology.
- From the Garmin Connect app, select  > **Connections**, and select to update the list of riders for your GroupTrack session.
- Make sure all of your connections pair to their phones and start a LiveTrack session in the Garmin Connect app.
- Make sure all your connections are in range (40 km or 25 mi.).
- During a GroupTrack session, scroll to the map to view your connections.
- Stop riding before you attempt to view location and heading information for other riders in the GroupTrack session.

## GroupRide

### WARNING

While cycling, always maintain awareness of your surroundings, and operate the bicycle in a safe manner. Failure to do so could result in serious injury or death.

### NOTICE

It is your responsibility to use discretion when sharing information with other riders. Always ensure you are aware of and comfortable with the riders with whom you share your location information and ride data, including heart rate.




With the GroupRide feature on your Edge® bike computer, you can create and access shared courses, group messaging, and live location and ride data with other riders with compatible devices.


### Starting a GroupRide Session

Before you can start a GroupRide session, you must have a phone with the Garmin Connect™ app paired to your device ([Pairing Your Phone, page 37](#)). When prompted, you must also agree to share your live location with other riders.

- 1 Select the **GroupRide** glance.
- 2 Select **Create GroupRide**.
- 3 Select **Name**, **Date**, or **Start Time** to edit the information.
- 4 Select **Add Course** to share a course with other riders.  
You can select from your saved courses, or you can select Create New to create a new course ([Courses, page 32](#)).
- 5 Select **Competitions** to compete with other riders for rankings and awards.
- 6 Select **Generate Code**.  
Your Edge® bike computer generates a code that you can send to other riders.

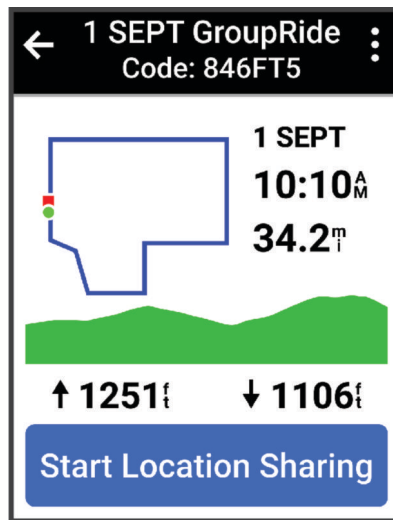

- 7 Select **: > Share Code > ✓**.
- 8 Open the Garmin Connect app, and select **View Code > Share**.
- 9 Select the method for sharing the code with other riders.  
The Garmin Connect app shares the GroupRide code with your contacts.
- 10 On the Edge bike computer, select **Start Location Sharing**.
- 11 Press **▶**, and go for a ride.  
The GroupRide data screen is added to the data screens for the active profile.
- 12 Select a rider from the **GroupRide** data screen to view their position on the map, or scroll to the map to view all riders ([GroupRide Map Status, page 43](#)).

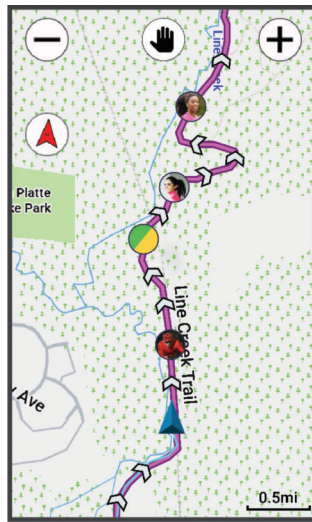

### Joining a GroupRide Session

You can join a GroupRide session on your Edge® bike computer when the GroupRide code is shared with you. You can enter the code prior to the start of the ride.

- 1 Scroll to the **GroupRide** glance.

**TIP:** You can add the GroupRide glance to the glance loop ([Customizing the Glances](#), page 64).

- 2 Select the glance to open it.

- 3 Select **Enter Code**.

- 4 Enter the 6-digit code, and select ✓.

Your Edge bike computer automatically downloads the course.

- 5 On the day of the ride, select **Start Location Sharing**.

- 6 Press ►, and go for a ride.

### Sending a GroupRide Message


You can send a message to other riders during a GroupRide session.

- 1 From the **GroupRide** data screen on your Edge® bike computer, press and hold ⋮.

- 2 Select an option:

- Select a message from the list of preset text responses.
- Select **Type Message** to send a customized message.

You can customize the preset text responses in the device settings in the Garmin Connect™ app. After customizing settings, you must sync your data to apply the changes to your Edge bike computer.

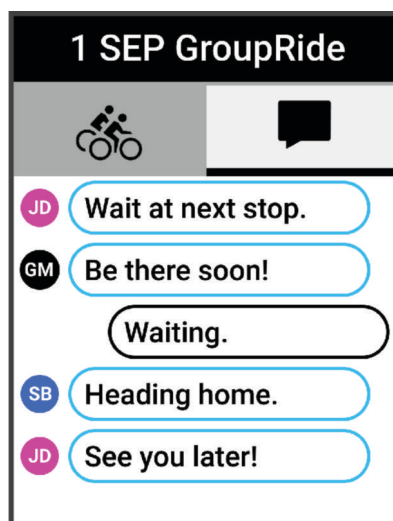

You can scroll up to the top of the message screen to view older messages, including any messages sent before you joined the GroupRide session ([Joining a GroupRide Session](#), page 42).

## GroupRide Map Status

During a ride, you can see the riders in your GroupRide session on the map.

**TIP:** The letters inside the map icons correspond to the initials of the rider's first name.

| Icon                                                                              | Shape  | Color | Moving  | Connected on the Garmin Connect™ App |
|-----------------------------------------------------------------------------------|--------|-------|---------|--------------------------------------|
|  | Circle | White | Yes     | No                                   |
|  | Circle | Blue  | Yes     | Yes                                  |
|  | Square | White | No      | No                                   |
|  | Square | Red   | No      | Yes                                  |
|  | Circle | Gray  | Unknown | Unknown                              |

To customize the map settings, from the GroupRide page select .

### Leaving a GroupRide Session

In order for your Edge® bike computer to remove you from the other riders' maps and lists, you must have an active internet connection.

You can leave a GroupRide session anytime.

Select an option:

- During the ride, press , and select **Leave GroupRide**.
- From the **GroupRide** page, select **Leave GroupRide**.
- Press  > **Save** to stop the activity time and complete your activity.

**TIP:** The Edge bike computer automatically removes the GroupRide session when it expires (*Tips for GroupRide Sessions, page 43*).

### Tips for GroupRide Sessions

- Ride outside using GPS.
- Pair your compatible Edge® bike computer with your phone using Bluetooth® technology.
- Group riders can add a GroupRide session to their device at any time, and then join the session on the day of the ride. Sessions expire 24 hours after the start time.
- To share the GroupRide code during the ride, select  > **Share Code** from the **GroupRide** data screen on the Edge bike computer.
- You can select  to mute all message prompts for that GroupRide session.
- The rider list refreshes every 15 seconds and shows details for the 25 closest riders within 40 km (25 mi). To view additional riders outside the 40 km (25 mi) radius, select **Show More**.
- During the ride, press  to view more options.
- Stop riding before you attempt to view location and heading information for other riders in the GroupRide session (*GroupRide Map Status, page 43*).
- To stop sharing your live location and ride data, leave the GroupRide from your bike computer. To stop sharing ride results and awards, remove yourself from the GroupRide in the Garmin Connect™ app (*Garmin Connect, page 45*).

### Live Event Sharing

Live event sharing allows you to send messages to friends and family during an event, providing real-time updates including cumulative time and last lap time. Before the event, you can customize the list of recipients and the message content in the Garmin Connect™ app.

#### Turning On Live Event Sharing

Before you can use live event sharing, you must set up the LiveTrack feature in the Garmin Connect™ app.

**NOTE:** LiveTrack features are available when your device is connected to the Garmin Connect app using Bluetooth® technology, with a compatible Android™ phone.

- 1 Turn on your Edge® bike computer.
- 2 In the Garmin Connect app, select  > **Safety & Tracking** > **Live Event Sharing**.
- 3 Select **Devices**, and select your Edge bike computer.
- 4 Select the toggle switch to enable **Live Event Sharing**.
- 5 Select **Done**.

- 6 Select **Recipients** to add people from your contacts.
  - 7 Select **Message Options** to customize the message triggers and options.
  - 8 Go outside, and select a GPS biking profile on your Edge 550 bike computer.
- Live event sharing is enabled for 24 hours.

### Spectator Messaging

**NOTE:** Your paired phone must be equipped with a data plan and be in an area of network coverage where data is available.

Spectator messaging is a feature that allows your LiveTrack followers to send you text messages during your cycling activity. You can set up this feature in the LiveTrack settings of the Garmin Connect™ app.

### Blocking Spectator Messages

If you want to block spectator messages, Garmin® recommends turning them off before you start the activity.

Select  > **Safety & Tracking** > **LiveTrack** > **Spectator Messaging**.

### Setting the Bike Alarm

You can turn on the bike alarm when you are away from your bike, such as on a stop during a long ride. You can control the bike alarm from your device or the device settings in the Garmin Connect™ app.

- 1 Select  > **Safety & Tracking** > **Bike Alarm**.

- 2 Create or update your passcode.

When you disable the bike alarm from your Edge® device, you are prompted to enter the passcode.

- 3 Hold , and select **Set Bike Alarm**.

If the device detects motion, it sounds an alarm and sends an alert to your connected phone.

### Playing Audio Prompts on Your Phone

Before you can set up audio prompts, you must have a phone with the Garmin Connect™ app paired to your Edge® bike computer.

You can set the Garmin Connect app to play motivational status announcements on your phone during a ride or other activity. Audio prompts include the lap number and lap time, navigation, power, pace or speed, and heart rate data. During an audio prompt, the Garmin Connect app mutes the primary audio of the phone to play the announcement. You can customize the volume levels on the Garmin Connect app.

- 1 From the Garmin Connect app, select **...**.

- 2 Select **Garmin Devices**.

- 3 Select your device.

- 4 Select **Audio Prompts**.

### Listening to Music

#### **WARNING**

Do not listen to music while cycling on public roadways, as this can cause distraction leading to an accident resulting in personal injury or death. It is the user's responsibility to know and understand local laws and regulations relating to headphone usage while cycling.

You can control music playback on your phone from your Edge® bike computer.

- 1 On your phone, start playing a song or playlist.

- 2 Select an option:

- From the timer screen on the Edge bike computer, press , select **Widgets**, and press  or  to view the music controls widget.

**NOTE:** You can add options to the widget loop ([Customizing the Widget Loop, page 64](#)).

- Move through the data screens to view the music controls data screen ([Adding a Data Screen, page 58](#)).

- 3 Start listening to music from your paired phone.

You can control music playback on your phone from your Edge bike computer.

### Garmin Share

#### **NOTICE**

It is your responsibility to use discretion when sharing information with others. Always ensure you are aware of and comfortable with the individual with whom you share information.

The Garmin Share feature allows you to use Bluetooth® technology to wirelessly share your data with other compatible Garmin® devices. With Garmin Share enabled and compatible Garmin devices in range of each other, you can select saved locations, courses, and workouts to transfer to another device through a direct, secured device-to-device connection, without the need for a phone or Wi-Fi® connectivity.

### Sharing Data with Garmin Share

Before you can use this feature, you must have Bluetooth® technology enabled on both compatible devices, and they must be within 3 m (10 ft.) of each other. When prompted, you must also consent to share your data with other Garmin® devices using Garmin Share.

Your Edge® device can send and receive data when connected to another compatible Garmin device (*Receiving Data with Garmin Share, page 45*). You can also transfer your data between different devices. For example, you can share a favorite course from your Edge bike computer to your compatible Garmin watch.

- 1 Select  > **Garmin Share** > **Share**.
- 2 Select a category, and select one or more items.
- 3 Select **Share Items**.
- 4 Wait while the device locates compatible devices.
- 5 Select a device.
- 6 Confirm the six-digit PIN matches on both devices, and select .
- 7 Wait while the devices transfer the data.
- 8 Select **Share Again** to share the same items with another user (optional).
- 9 Select .

### Receiving Data with Garmin Share

Before you can use this feature, you must have Bluetooth® technology enabled on both compatible devices, and they must be within 3 m (10 ft.) of each other. When prompted, you must also consent to share your data with other Garmin® devices using Garmin Share.

- 1 Select  > **Garmin Share**.
- 2 Wait while the device locates compatible devices in range.
- 3 Select .
- 4 Confirm the six-digit PIN matches on both devices, and select .
- 5 Wait while the devices transfer the data.
- 6 Select .

You can view the received data in the Training or Navigation menus. The home screen displays the last item received.

### Garmin Share Settings

Select  > **Garmin Share** > .

**Status:** Enables the Edge® bike computer to receive items through Garmin Share.

**Forget Devices:** Removes devices the bike computer previously shared items with.

## Phone Apps and Computer Applications

You can connect your bike computer to multiple Garmin® phone apps and computer applications using the same Garmin account.

### Garmin Connect


You can connect with your friends on Garmin Connect™. Garmin Connect gives you the tools to track, analyze, share, and encourage each other. Record the events of your active lifestyle including rides, runs, walks, swims, hikes, triathlons, and more.

You can create your free Garmin Connect account when you pair your device with your phone using the Garmin Connect app, or you can go to [connect.garmin.com](https://connect.garmin.com).

**Store your activities:** After you complete and save an activity with your device, you can upload that activity to Garmin Connect and keep it as long as you want.

**Analyze your data:** You can view more detailed information about your activity, including time, distance, elevation, heart rate, calories burned, cadence, an overhead map view, pace and speed charts, and customizable reports.

**NOTE:** Some data requires an optional accessory such as a heart rate monitor.

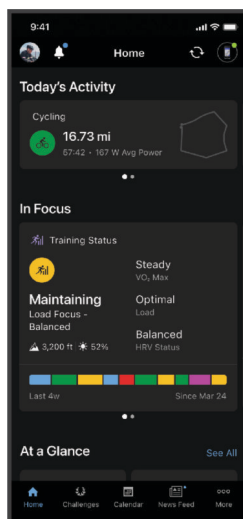

**Plan your training:** You can choose a fitness goal and load one of the day-by-day training plans.

**Share your activities:** You can connect with friends to follow each other's activities or share links to your activities.

**Manage your settings:** You can customize your bike computer and user settings on your Garmin Connect account.

### Using the Garmin Connect™ App

After you pair your bike computer with your phone, you can use the Garmin Connect app to upload all of your activity data to your Garmin Connect account ([Pairing Your Phone, page 37](#)).

You can customize your bike computer settings, activity profiles, data fields, and user settings on your Garmin Connect account, using either the Garmin Connect app or the Garmin Connect website.

1 Verify the Garmin Connect app is running on your phone.

2 Bring your bike computer within 10 m (30 ft.) of your phone.

Your bike computer automatically syncs your data with the Garmin Connect app and your Garmin Connect account.

### Updating the Software Using the Garmin Connect™ App

Before you can update your device software using the Garmin Connect app, you must have a Garmin Connect account, and you must pair the device with a compatible phone ([Pairing Your Phone, page 37](#)).

Sync your device with the Garmin Connect app.

When new software is available, the Garmin Connect app automatically sends the update to your device.

### Unified Training Status

When you use more than one Garmin® device with your Garmin Connect™ account, you can choose which device is the primary data source for everyday use and for training purposes.

From the Garmin Connect app, select •• > **Settings**.

**Primary Training Device:** Sets the priority data source for training metrics like your training status and load focus.

**Primary Wearable:** Sets the priority data source for daily health metrics like steps and sleep. This should be the watch you wear most often.

**TIP:** For the most accurate results, Garmin recommends that you sync often with your Garmin Connect account.

### Sending Your Ride to Garmin Connect™

- Sync your Edge® bike computer with the Garmin Connect app on your phone.
- Use the USB cable that came with your Edge bike computer to send ride data to your Garmin Connect account on your computer.

### Using Garmin Connect™ on Your Computer

The Garmin Express™ application connects your device to your Garmin Connect account using a computer. You can use the Garmin Express application to upload your activity data to your Garmin Connect account and to send data, such as workouts or training plans, from the Garmin Connect website to your device. You can also install device software updates and manage your Connect IQ™ apps.



- 1 Connect the device to your computer using the USB cable.
- 2 Go to [garmin.com/express](https://garmin.com/express).
- 3 Download and install the Garmin Express application.
- 4 Open the Garmin Express application, and select **Add Device**.
- 5 Follow the on-screen instructions.

### Updating the Software Using Garmin Express™

Before you can update your device software, you must have a Garmin Connect™ account, and you must download the Garmin Express application.

- 1 Connect the device to your computer using the USB cable.  
When new software is available, Garmin Express sends it to your device.
- 2 Follow the on-screen instructions.
- 3 Do not disconnect your device from the computer during the update process.  
If you have already set up your device with Wi-Fi connectivity, Garmin Connect can automatically download available software updates to your device when it connects using Wi-Fi.

### Garmin Connect+™ Subscription

You can enhance the data, connections, and training available on your Garmin Connect account with a Garmin Connect+ subscription. To sign up, you can download the Garmin Connect app from the app store on your phone, or go to [connect.garmin.com](https://connect.garmin.com).

**Active Intelligence (AI):** Receive AI insights about your data and activities.

**LiveTrack+:** Send LiveTrack text messages, receive a personalized profile page, and view previous LiveTrack sessions.

**Training guidance:** Get additional expert support and guidance for select Garmin® Coach training plans.

**Performance dashboard:** View your training data your way with customized charts and graphs.

**Social features:** Gain access to exclusive badges, badge challenges, and double points for challenges. You can update your profile avatar with customizable frames.

### Connect IQ™ Downloadable Features

You can add Connect IQ features to your device from Garmin® and other providers using the Connect IQ app.

**Data Fields:** Allow you to download new data fields that present sensor, activity, and history data in new ways.  
You can add Connect IQ data fields to built-in features and pages.

**Widgets:** Provide information at a glance, including sensor data and notifications.

**Apps:** Add interactive features to your device, such as new outdoor and fitness activity types.

### Downloading Connect IQ™ Features

Before you can download features from the Connect IQ app, you must pair your Garmin® watch or bike computer with your phone ([Pairing Your Phone, page 37](#)).

- 1 From the app store on your phone, install and open the Connect IQ app.
- 2 If necessary, select your watch or bike computer.
- 3 Select a Connect IQ feature.
- 4 Follow the on-screen instructions.

### Downloading Connect IQ™ Features Using Your Computer

- 1 Connect the watch to your computer using a USB cable.
- 2 Go to [apps.garmin.com](https://apps.garmin.com), and sign in.
- 3 Select a Connect IQ feature, and download it.
- 4 Follow the on-screen instructions.

### Wi-Fi® Connectivity Features

**Activity uploads to your Garmin Connect™ account:** Automatically sends your activity to your Garmin Connect account as soon as you finish recording the activity.

**Software updates:** You can download and install the latest software.

**Workouts and training plans:** You can browse for and select workouts and training plans on the Garmin Connect website. The next time your device has a Wi-Fi connection, the files are sent to your device.



**Map updates:** You can update the maps on your Edge® bike computer. Keeping maps up to date helps your device find recently added locations and calculate more accurate routes ([Managing Maps, page 36](#)).

## Setting Up Wi-Fi® Connectivity

You must connect your device to the Garmin Connect™ app on your phone or to the Garmin Express™ application on your computer before you can connect to a Wi-Fi network.

- 1 Select an option:
  - Download the Garmin Connect app, and pair your phone ([Pairing Your Phone, page 37](#)).
  - Go to [garmin.com/express](http://garmin.com/express), and download the Garmin Express application.
- 2 Follow the on-screen instructions to set up Wi-Fi connectivity.

## Wi-Fi® Settings

Select  > **Connected Features** > **Wi-Fi**.

**Enable:** Enables Wi-Fi wireless technology.

Other Wi-Fi settings appear only when Wi-Fi is enabled.

**Auto Upload:** Allows you to upload activities automatically over a known wireless network.

**Wi-Fi Sync:** Select to manually sync Wi-Fi.

**Add Network:** Connects your device to a wireless network.

## Wireless Sensors

Your Edge® bike computer can be paired and used with wireless sensors using ANT+® or Bluetooth® technology ([Pairing Your Wireless Sensors, page 49](#)). After the devices are paired, you can customize the optional data fields ([Adding a Data Screen, page 58](#)). If your device was packaged with a sensor, they are already paired. For information about specific Garmin® sensor compatibility, purchasing, or to view the owner's manual, go to [buy.garmin.com](http://buy.garmin.com) for that sensor.

| Sensor Type      | Description                                                                                                                                                                                                                                                                                                                                      |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| eBike            | You can use your device with your eBike and view bike data, such as battery and shifting information, during your rides ( <a href="#">Viewing eBike Sensor Details, page 53</a> ).                                                                                                                                                               |
| Edge Remote      | You can control your Edge bike computer with the Edge remote, including starting the activity timer, marking laps, and scrolling through data screens.                                                                                                                                                                                           |
| Extended Display | You can use the Extended Display mode to display data screens from your compatible Garmin watch on a compatible Edge bike computer during a ride or triathlon ( <a href="#">Setting Up Extended Display Mode, page 65</a> ).                                                                                                                     |
| Heart Rate       | You can use an external sensor, such as the HRM 200, HRM 600, HRM-Dual™, HRM-Fit™, or HRM-Pro™ series heart rate monitor, to view heart rate data during your activities.                                                                                                                                                                        |
| inReach Remote   | The inReach® remote function allows you to control your inReach satellite communicator using your Edge bike computer ( <a href="#">Using the inReach® Remote, page 54</a> ).                                                                                                                                                                     |
| Lights           | You can use Varia™ smart bike lights to improve situational awareness. With a Varia headlight camera, you can also take photos and record video during a ride ( <a href="#">Using the Varia™ Camera Controls, page 52</a> ).                                                                                                                     |
| Power            | You can use the Rally™ or Vector™ power meter bike pedals to view power data on your device. You can adjust the power zones to match your goals and abilities ( <a href="#">Setting Your Power Zones, page 27</a> ), or use range alerts to be notified when you reach a specified power zone ( <a href="#">Setting Range Alerts, page 60</a> ). |
| Radar            | You can use a Varia rearview bike radar to improve situational awareness and send alerts about approaching vehicles ( <a href="#">Radar Data Screen, page 52</a> ). With a Varia radar camera tail light, you can also take photos and record video during a ride ( <a href="#">Using the Varia™ Camera Controls, page 52</a> ).                 |
| Shifting         | You can use electronic shifters to display shifting information during a ride. The Edge 550 bike computer displays current adjustment values when the sensor is in adjustment mode.                                                                                                                                                              |
| Shimano Di2      | You can use Shimano® Di2™ electronic shifters to display shifting information during a ride. The Edge 550 bike computer displays current adjustment values when the sensor is in adjustment mode.                                                                                                                                                |
| Shimano E-Bike   | You can use your bike computer with your Shimano eBike system and view bike data, such as battery and shifting information, during your rides ( <a href="#">Viewing eBike Sensor Details, page 53</a> ).                                                                                                                                         |
| Smart Trainer    | You can use your bike computer with an indoor bike smart trainer to simulate resistance while following a course, ride, or workout ( <a href="#">Using an Indoor Trainer, page 15</a> ).                                                                                                                                                         |
| Speed/Cadence    | You can attach speed or cadence sensors to your bike and view the data on your bike computer during your ride. If necessary, you can manually enter your wheel circumference ( <a href="#">Wheel Size and Circumference, page 82</a> ).                                                                                                          |
| Tempe            | You can attach the tempe™ temperature sensor to a secure strap or loop where it is exposed to ambient air, so it provides a consistent source of accurate temperature data.                                                                                                                                                                      |
| VIRB             | The VIRB® remote function allows you to control your VIRB action camera using your bike computer.                                                                                                                                                                                                                                                |

## Pairing Your Wireless Sensors

The first time you connect a wireless sensor to your device using ANT+® or Bluetooth® technology, you must pair the device and sensor. After they are paired, the Edge® bike computer connects to the sensor automatically when you start an activity and the sensor is active and within range. For more information about connection types, go to [garmin.com/hrm\\_connection\\_types](http://garmin.com/hrm_connection_types).

If your device was packaged with a sensor, they are already paired.

- 1 Put on the heart rate monitor, install the sensor, or press the button to wake up the sensor.

**NOTE:** See your wireless sensor owner's manual for pairing information.

- 2 Bring the device within 3 m (10 ft.) of the sensor.  
Stay 10 m (33 ft.) away from other riders' sensors while pairing.

- 3 Hold .

- 4 Select **Sensors > Add Sensor**.

- 5 Select an option:

- Select a sensor type.
- Select **Search All** to search for all nearby sensors.

A list of available sensors appears.

**6** Select one or more sensors to pair with your device.

**7** Select **Add**.

When the sensor is paired with your device, the sensor status is Connected. You can customize a data field to display sensor data.

## Wireless Sensor Battery Life

After you go for a ride, battery life levels for the wireless sensors that were connected during the activity appear. The list is sorted by battery level.

## Data Averaging for Cadence or Power

The non-zero data-averaging setting is available if you are training with an optional cadence sensor or power meter. The default setting excludes zero values that occur when you are not pedaling.

You can change the value of this setting ([Data Recording Settings, page 64](#)).

## Training with Power Meters

- Go to [garmin.com/intosports](http://garmin.com/intosports) for a list of power meters that are compatible with your Edge® bike computer (such as Rally™ and Vector™ systems).
- For more information, see the owner's manual for your power meter.
- Adjust your power zones to match your goals and abilities ([Setting Your Power Zones, page 27](#)).
- Use range alerts to be notified when you reach a specified power zone ([Setting Range Alerts, page 60](#)).
- Customize the power data fields ([Adding a Data Screen, page 58](#)).

## Calibrating Your Power Meter

Before you can calibrate your power meter, you must install it, pair it with your device, and ensure the power meter is actively transmitting data.

For calibration instructions specific to your power meter, see the manufacturer's instructions.

**1** Select  > **Sensors**.

**2** Select your power meter.

**3** Select **Calibrate**.

**TIP:** Keep your power meter active until the message appears.

**4** Follow the on-screen instructions.

## Pedal-Based Power

Rally™ measures pedal-based power.

Rally measures the force you apply a few hundred times every second. Rally also measures your cadence or rotational pedaling speed. By measuring the force, the direction of force, the rotation of the crank arm, and time, Rally can determine power (watts). Because Rally independently measures left and right leg power, it reports your left-right power balance.

**NOTE:** The single-sensing Rally system does not provide left-right power balance.

## Cycling Dynamics

Cycling dynamics metrics measure how you apply power throughout the pedal stroke, and where you apply power on the pedal, allowing you to understand your particular way of riding. Understanding how and where you produce power allows you to train more efficiently and evaluate your bike fit.

**NOTE:** You must have a compatible, dual sensing power meter connected using ANT+® technology to use cycling dynamics metrics.

For more information, go to [garmin.com/performance-data/cycling](http://garmin.com/performance-data/cycling).


## Using Cycling Dynamics

Before you can use cycling dynamics, you must pair the power meter with your device using ANT+® technology ([Pairing Your Wireless Sensors, page 49](#)).

**NOTE:** Recording cycling dynamics uses additional device memory.

**1** Go for a ride.

- 2 Scroll to the cycling dynamics screen to view your power phase data ①, total power ②, and platform center offset ③.

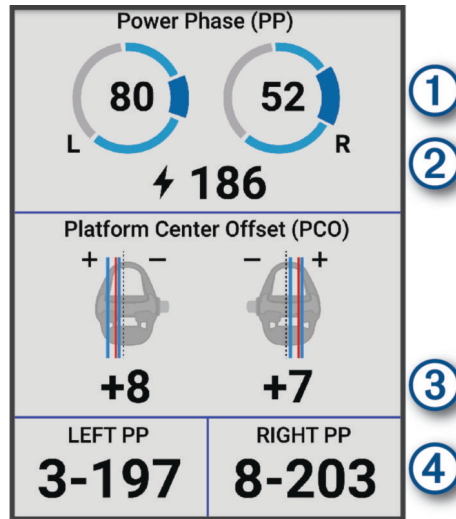

- 3 If necessary, select **Data Fields** to change a data field ([Adding a Data Screen, page 58](#)).

**NOTE:** The two data fields at the bottom of the screen ④ can be customized.

You can send the ride to the Garmin Connect™ app to view additional cycling dynamics data ([Sending Your Ride to Garmin Connect™, page 46](#)).

#### Power Phase Data

Power phase is the pedal stroke region (between the start crank angle and the end crank angle) where you produce positive power.

#### Platform Center Offset

Platform center offset is the location on the pedal platform where you apply force.

#### Customizing Cycling Dynamics Features

Before you can customize Rally™ features, you must pair a Rally power meter with your device.

- 1 Select > **Sensors**.
- 2 Select the Rally power meter.
- 3 Select **Sensor Details > Cycling Dynamics**.
- 4 Select an option.
- 5 If necessary, select the toggle switches to turn on or off torque efficiency, pedal smoothness, and cycling dynamics.

#### Updating the Rally™ System Software Using the Edge® Bike Computer

Before you can update the software, you must pair your Edge bike computer with your Rally system.

- 1 Send your ride data to your Garmin Connect™ account ([Sending Your Ride to Garmin Connect™, page 46](#)).  
Garmin Connect automatically looks for software updates and sends them to your Edge bike computer.
- 2 Bring your Edge bike computer within range (3 m) of the power meters.
- 3 Rotate the crank arm a few times. The Edge bike computer prompts you to install all pending software updates.
- 4 Follow the on-screen instructions.

#### Situational Awareness

##### **WARNING**

The Varia™ line of cycling awareness products can improve situational awareness. They are not a replacement for cyclist attentiveness and good judgment. Always maintain awareness of your surroundings, and operate the bicycle in a safe manner. Failure to do so could result in serious injury or death.

Your Edge® bike computer can be used with the Varia line of cycling awareness products ([Wireless Sensors, page 49](#)). See the owner's manual for your accessory for more information.

## Using the Varia™ Camera Controls


### NOTICE

Some jurisdictions may prohibit or regulate the recording of video, audio, or photographs, or may require that all parties have knowledge of the recording and provide consent. It is your responsibility to know and follow all laws, regulations, and any other restrictions in jurisdictions where you plan to use this device.

Before you can use the Varia camera controls, you must pair the accessory with your bike computer ([Pairing Your Wireless Sensors, page 49](#)).

- 1 Press **:**, and select **Camera Controls**.

The bike computer displays the camera controls, as well as the recording mode, battery status, video resolution, and audio status of all connected cameras.

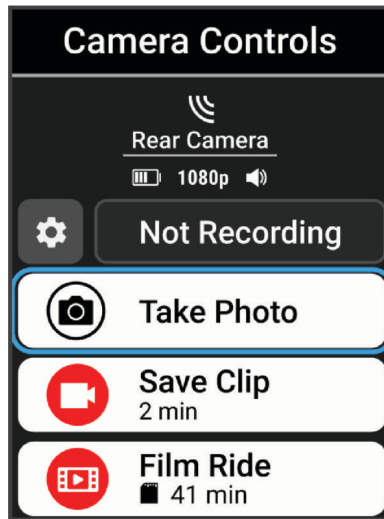

- 2 Select an option:

- Select **Headlight Camera** or **Radar Camera** to customize the camera settings.
- Select **Take Photo**, **Save Clip**, or **Film Ride**.


## Radar Data Screen

### ⚠ WARNING

The device can improve situational awareness. It is not a replacement for cyclist attentiveness and good judgement. Always maintain awareness of your surroundings, and operate the bicycle in a safe manner. Failure to do so could result in serious injury or death.

Before you can view the Varia™ radar data, you must pair the compatible accessory with your bike computer ([Pairing Your Wireless Sensors, page 49](#)).

You can add a radar data screen to remotely control your connected Varia RearVue radar device and view radar data. The radar data screen shows a graphical representation of the road behind you, as you are riding. Each icon ① represents an approaching vehicle. For more information, see the manual for your radar accessory.

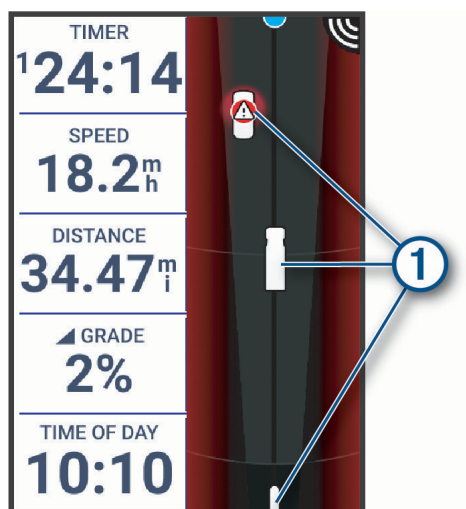

The vehicle icon moves up and across the screen as the vehicle approaches you, representing the vehicle's position relative to you. The radar calculates a threat level based on vehicle size, speed, and other factors ([Enabling the Green Threat Level Tone, page 53](#)).

| Icon | Threat Level |
|------|--------------|
|      | Mid level    |
|      | High level   |

**TIP:** You can add five data fields to this screen ([Editing a Data Screen, page 59](#)).

### Enabling the Green Threat Level Tone

Before you can enable the green threat level tone, you must pair the device with a compatible Varia™ rearview radar device and enable tones.

You can enable a tone that plays when your radar transitions to the green threat level.

- 1 Select > **Sensors**.
- 2 Select your radar device.
- 3 Select **Sensor Details** > **Alert Settings**.
- 4 Select the **Green Threat Level Tone** toggle switch.

## Electronic Shifters

Before you can use compatible electronic shifters, such as Shimano® Di2™ or SRAM® AXS shifters, you must pair them with your Edge® bike computer ([Pairing Your Wireless Sensors, page 49](#)).

You can configure available shifter buttons to control actions on your Edge bike computer, such as starting and stopping activities and recording laps. You can also customize the optional data fields ([Adding a Data Screen, page 58](#)). When fine-tuning the position of your electronic shifters, the Edge bike computer can display the trim adjustment values.

## eBike Training

Before you can use a compatible eBike, such as a Shimano® eBike system, you must pair it with your Edge® device ([Pairing Your Wireless Sensors, page 49](#)). You can customize the optional eBike data screen and data fields ([Adding a Data Screen, page 58](#)).

### Viewing eBike Sensor Details

- 1 Select > **Sensors**.
  - 2 Select your eBike.
  - 3 Select an option:
    - To view eBike details, such as the odometer or travel distance, select **Sensor Details** > **eBike Details**.
    - To view eBike error messages, select .
- See the eBike owner's manual for more information.

## inReach® Remote

The inReach remote function allows you to control your inReach satellite communicator using your Edge® bike computer. Go to [buy.garmin.com](http://buy.garmin.com) for more information about compatible devices.

### Using the inReach® Remote

- 1 Turn on the inReach satellite communicator.
- 2 On your Edge® bike computer, select  > **Sensors** > **Add Sensor** > **inReach**.
- 3 Select your inReach satellite communicator, and select **Add**.
- 4 From the home screen, select  > **inReach Remote**.
- 5 Select an option:
  - To send a preset message, select **Messages** > **Send Preset**, and select a message from the list.
  - To send a text message, select **Messages** > **Start Conversation**, select the message contacts, and enter the message text or select a quick text option.
  - To view the timer and distance traveled during a tracking session, select **Tracking** > **Start Tracking**.
  - To send an SOS message, select **SOS**.

**NOTE:** You should only use the SOS function in a real emergency situation.



# History

The history glance on your Edge® 550 bike computer includes time, distance, calories, speed, lap data, elevation, and optional information about sensors using ANT+® technology.

**NOTE:** History is not recorded while the activity timer is stopped or paused.

When the device memory is full, a message appears. The device does not automatically delete or overwrite your history. Upload your history to your Garmin Connect™ account periodically to keep track of all your ride data.

## Viewing Your Ride

- 1 From the home screen, press  to view the history glance.

**NOTE:** You may need to add the glance to your home screen ([Customizing the Glances, page 64](#)).

- 2 Select the history glance.
- 3 Select **Rides**.
- 4 Select a ride.
- 5 Select an option.

## Viewing Your Time in Each Training Zone

Before you can view your time in each training zone, you must pair your device with a compatible heart rate monitor or power meter, complete an activity, and save the activity.

Viewing your time in each heart rate and power zone can help you adjust your training intensity. You can adjust your power zones ([Setting Your Power Zones, page 27](#)) and your heart rate zones ([Setting Your Heart Rate Zones, page 27](#)) to match your goals and abilities. You can customize a data field to display your time in training zones during your ride ([Adding a Data Screen, page 58](#)).

- 1 From the home screen, press  to view the history glance.

**NOTE:** You may need to add the glance to your home screen ([Customizing the Glances, page 64](#)).

- 2 Select the history glance.
- 3 Select **Rides**.
- 4 Select a ride.
- 5 Select **Summary**.
- 6 Select an option:
  - Select **HR Zones**.
  - Select **Power Zones**.

## Deleting a Ride

- 1 From the home screen, press  to view the history glance.

**NOTE:** You may need to add the glance to your home screen ([Customizing the Glances, page 64](#)).

- 2 Select the history glance.
- 3 Select **Rides**.
- 4 Select a ride.
- 5 Select  > **Delete** > .

## Viewing Data Totals

You can view the accumulated data you have saved to the device, including the number of rides, time, distance, and calories.

- 1 From the home screen, press  to view the history glance.

**NOTE:** You may need to add the glance to your home screen ([Customizing the Glances, page 64](#)).

- 2 Select the history glance.
- 3 Select **Totals**.

## Deleting Data Totals

- 1 From the home screen, press  to view the history glance.

**NOTE:** You may need to add the glance to your home screen ([Customizing the Glances, page 64](#)).

- 2 Select the history glance.
- 3 Select **Totals**.

4 Select an option:

- Select  to delete all data totals from the history.
- Select an activity profile to delete accumulated data totals for a single profile.

**NOTE:** This does not delete any saved activities.

5 Select .

## Data Recording

The device records points every second. Recording points every second provides an extremely detailed track and uses more of the available memory.

For information about data averaging for cadence and power, see [Data Averaging for Cadence or Power](#), page 50.

## Data Management

**NOTE:** The device is not compatible with Windows® 95, 98, Me, Windows NT®, and Mac® OS 10.3 and earlier.

### Connecting the Device to Your Computer

#### NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

- 1 Pull up the weather cap from the USB port.
- 2 Plug one end of the cable into the USB port on the device.
- 3 Plug the other end of the cable into a computer USB port.

Your device appears as a removable drive in This PC on Windows® computers. Because Mac® operating systems provide limited support for MTP (media transfer protocol) file transfer mode, you should use the Garmin Express™ application to view your device on a Mac computer.

### Transferring Files to Your Device

- 1 Connect the device to your computer.

Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.

**NOTE:** Mac® operating systems do not detect the device by default. You must use Garmin Express™ software to interact with files on your device.

- 2 On your computer, open the file browser.
- 3 Select a file.
- 4 Select **Edit > Copy**.
- 5 Open the portable device, drive, or volume for the device.
- 6 Browse to a folder.

**NOTE:** Most file types have a named folder within the Garmin® folder.

- 7 Select **Edit > Paste**.

The file appears in the list of files in the device memory.

### Deleting Files

#### NOTICE

If you do not know the purpose of a file, do not delete it. Your device memory contains important system files that should not be deleted.

- 1 Open the **Garmin** drive or volume.
- 2 If necessary, open a folder or volume.
- 3 Select a file.
- 4 Press the **Delete** key on your keyboard.

**NOTE:** Mac® operating systems provide limited support for MTP file transfer mode. You must open the Garmin drive on a Windows® operating system.

# Customizing Your Device

## Profiles

The Edge® bike computer has several ways for you to customize the device, including profiles. Profiles are a collection of settings that optimize your device based on how you are using it. For example, you can create different settings and views for training and mountain biking.

When you are using a profile and you change settings such as data fields or units of measurement, the changes are saved automatically as part of the profile.

**Activity Profiles:** You can create activity profiles for each type of biking. For example, you can create a separate activity profile for training, for racing, and for mountain biking. The activity profile includes customized data pages, activity totals, alerts, training zones (such as heart rate and speed), training settings (such as Auto Pause® and Auto Lap® features), and navigation settings.

**TIP:** When you sync, activity profiles are saved in your Garmin Connect™ account and can be sent to your device at any time.

**User Profile:** You can update your sex, age, weight, and height settings. The device uses this information to calculate accurate ride data.

## Biking Activity Profiles

Each time you ride with the Edge® biking computer, you are prompted to select an activity profile. Each activity profile stores training settings, routing options, and display preferences optimized for the activity. You should select the activity profile based on the type of ride or road surface ([Updating Your Activity Profile, page 58](#)).

**Enduro MTB:** This is a mountain bike profile that specifically tracks ascents and descents separately on unpaved terrain, and records descent GPS in 5Hz if enabled ([5Hz Data Recording, page 64](#)). You manually press the  button as you transition between climbs and descents, and the bike computer displays a notification summarizing the completed split. You can enable Auto Pause settings for the climb and descent portions of the ride. This activity profile also tracks trail difficulty, and the map provides shaded relief and contours by default.

**Downhill MTB:** You should use this profile if you are riding a ski lift or transporting your bike uphill, and riding your bike downhill. This profile tracks descents on unpaved terrain, and records descent GPS in 5Hz if enabled. A downhill descent is called a run, and after each run, the bike computer displays a notification with run summary data. Activity summary totals do not include any ascent data. This activity profile also tracks trail difficulty, and the map provides shaded relief and contours by default.

**Tour:** This activity profile is ideal for navigating to specific destinations on mixed terrain surfaces. For example, if you create a route that includes trails mixed with roadside attractions or campgrounds.

**Indoor:** The bike computer includes an indoor activity profile where GPS is turned off. Select this profile if you are training indoors or want to save battery life. When GPS is turned off, speed and distance are not available unless you have a compatible sensor or indoor trainer that sends speed and distance data to the device ([Wireless Sensors, page 49](#)).

## Setting Up Your User Profile

You can update your sex, age, weight, and height settings. The device uses this information to calculate accurate ride data.

- 1 Select  > **My Stats** > **User Profile**.
- 2 Select an option.

### Gender Settings

When you first set up the device, you must choose a sex. Most fitness and training algorithms are binary. For the most accurate results, Garmin® recommends selecting your sex assigned at birth. After the initial setup, you can customize the profile settings in your Garmin Connect™ account.

**Profile & Privacy:** Enables you to customize the data on your public profile.

**User Settings:** Sets your sex. If you select Not Specified, the algorithms that require a binary input will use the sex you specified when you first set up the device.

## Training Settings

The following options and settings allow you to customize your device based on your training needs. These settings are saved to an activity profile. For example, you can set time alerts for your road profile, and you can set an Auto Lap® position trigger for your mountain biking profile.

**TIP:** You can also customize the activity profiles from the device settings in the Garmin Connect™ app.

Select  > **Activity Profiles**, and select a profile.

**Alerts and Prompts:** Sets how laps are triggered, and customizes the training or navigation alerts for the activity ([Alerts and Prompts Settings](#), page 60).

**Auto Lock:** Enables the device to automatically lock the device buttons during a ride to prevent accidental button presses ([Locking and Unlocking the Bike Computer](#), page 63).

**Auto Sleep:** Enables the device to automatically enter sleep mode after five minutes of inactivity ([Using Auto Sleep](#), page 62).

**Climbs:** Enables the ClimbPro feature and sets which types of climbs the device detects ([Using ClimbPro](#), page 34).

**Data Screens:** Enables you to customize data screens and add new data screens for the activity ([Adding a Data Screen](#), page 58).

**MTB/CX:** Enables grit, flow, and jump recording. Select this setting to enable jump alerts. You can also turn **ForkSight** on and off in mountain biking activity profiles, such as **Mountain** or **Enduro MTB** ([ForkSight](#), page 34).

**Navigation:** Sets navigation messages, and customizes the map and routing settings ([Map Settings](#), page 35) ([Route Settings](#), page 36).

**Nutrition/Hydration:** Enables food and drink consumption tracking.

**Ride Type:** Sets the type of ride that is typical for this activity profile, such as commuting.

After a ride that is not typical, you can manually update the ride type. Accurate ride type data is important for creating bike friendly courses.

**Satellite Systems:** Allows you to turn off GPS ([Training Indoors](#), page 15), or set the satellite system to use for the activity ([Changing the Satellite Setting](#), page 63).

**Segments:** Turns on your enabled segments ([Enabling Segments](#), page 14).

**Self Evaluation:** Sets how often you evaluate your perceived effort for the activity ([Evaluating an Activity](#), page 8).

**Timer:** Sets timer preferences. The **Auto Pause** option allows you to set when the activity timer automatically pauses ([Using Auto Pause](#), page 62). The **Timer Start Mode** option enables you to set how the device detects the start of a ride and automatically starts the activity timer ([Starting the Timer Automatically](#), page 62).

## Updating Your Activity Profile

You can customize your activity profiles. You can customize your settings and data fields for a particular activity or trip ([Training Settings](#), page 57).

**TIP:** You can also customize the activity profiles from the device settings in the Garmin Connect™ app.

1 Select  > **Activity Profiles**.

2 Select an option:

- Select a profile.
- Select **Create New** to create a new profile by copying an existing profile or using a template.

3 If necessary, select  to edit the name or color of the profile, or to remove the profile.

**TIP:** After a ride that is not typical, you can manually update the ride type. Accurate ride type data is important for creating bike friendly courses.

## Adding a Data Screen

1 Select  > **Activity Profiles**.

2 Select a profile.

3 Select **Data Screens** > **Add Data Screen** > **Data Screen**.

4 Select a category, and select one or more data fields.

**TIP:** For a list of all the available data fields, go to ([Data Fields](#), page 76).

5 Select .

6 Select an option:

- Select another category to select more data fields.
- Hold  to select .

7 Press  or  to change the layout.

8 Select .

- 9 Select an option:
  - Select a data field, then select another data field to rearrange them.
  - Select a data field twice to change it.

- 10 Hold  to select .

The added data screen appears in the list of data screens for the profile ([Rearranging Data Screens, page 59](#)).

### Adding a Music Control Data Screen

You can add a data screen to display music controls ([Listening to Music, page 44](#)).

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Data Screens** > **Add Data Screen** > **Music Controls**.

The added music data screen appears in the list of data screens for the profile ([Rearranging Data Screens, page 59](#)).

### Adding Workout Data Fields

You can customize a data screen to display real-time workout data, such as your primary target information, duration countdown, and more ([Workouts, page 9](#)).

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Data Screens** > **Add Data Screen** > **Data Screen** > **Workouts**.
- 4 Select one or more data fields to add or remove.
- 5 Press .
- 6 Hold  to select .
- 7 Press  or  to change the layout.
- 8 Press .
- 9 Select an option:
  - Select a data field, then select another data field to rearrange them.
  - Select a data field twice to change it.
- 10 Hold  to select .

The added data screen appears in the list of data screens for the profile ([Rearranging Data Screens, page 59](#)).

### Editing a Data Screen

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Data Screens**.
- 4 Select a data screen.
- 5 Select **Layout and Data Fields**.
- 6 Select  or  to change the layout.
- 7 Press .
- 8 Select an option:
  - Select a data field, then select another data field to rearrange them.
  - Select a data field twice to change it.
- 9 Hold .

### Rearranging Data Screens

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Data Screens** >  > **Reorder**.
- 4 Select a data screen.
- 5 Press  or .
- 6 Press  > .

## Alerts and Prompts Settings

You can use alerts to train toward specific time, distance, calorie, heart rate, cadence, and power goals. You can also set up navigation alerts. Alert settings are saved with your activity profile ([Training Settings, page 57](#)).

Select  > **Activity Profiles**, select a profile, and select **Alerts and Prompts**.

**Sharp Bend Warnings:** Enables alerts for difficult turns.

**High Traffic Road Warnings:** Enables alerts for high traffic areas.

**Road Hazard Warnings:** Enables alerts for road hazards, such as potholes or obstructions ([Reporting a Hazard, page 31](#)).

**Unpaved Road Warnings:** Enables alerts for unpaved roads, such as those with dirt or gravel.

**Workout Target Alerts:** Enables an alert when you reach a target during your workout.

**Lap:** Sets how laps are triggered ([Marking Laps by Position, page 61](#)).

**Time Alert:** Sets an alert for a specified time ([Setting Recurring Alerts, page 60](#)).

**Distance Alert:** Sets an alert for a specified distance ([Setting Recurring Alerts, page 60](#)).

**Calorie Alert:** Sets an alert when you have burned a specified number of calories.

**Heart Rate Alert:** Sets the device to alert you when your heart rate is above or below a target zone ([Setting Range Alerts, page 60](#)).

**Cadence Alert:** Sets the device to alert you when your cadence is above or below a custom range of reps per minute ([Setting Range Alerts, page 60](#)).

**Power Alert:** Sets the device to alert you when your power threshold is above or below a target zone ([Setting Range Alerts, page 60](#)).

**Turn Around Alert:** Sets an alert to indicate when you should turn around during your ride.

**Eat Alert:** Sets an alert to notify you to eat at a specified time, distance, or strategic interval during your ride ([Setting Smart Eat and Drink Alerts, page 61](#)).

**Drink Alert:** Sets an alert to notify you to drink at a specified time, distance, or strategic interval during your ride ([Setting Smart Eat and Drink Alerts, page 61](#)).

**Connect IQ Alerts:** Enables alerts that have been set up in Connect IQ™ apps.

### Setting Range Alerts

If you have an optional heart rate monitor, cadence sensor, or power meter, you can set up range alerts. A range alert notifies you when the device measurement is above or below a specified range of values. For example, you can set the device to alert you when your cadence is below 40 RPM and over 90 RPM. You can also use a training zone for the range alert ([Training Zones, page 27](#)).

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Alerts and Prompts**.
- 4 Select **Heart Rate Alert**, **Cadence Alert**, or **Power Alert**.
- 5 Select the minimum and maximum values, or select zones.

Each time you exceed or drop below the specified range, a message appears. The device also beeps if audible tones are turned on ([Turning the Device Tones On and Off, page 65](#)).

### Setting Recurring Alerts

A recurring alert notifies you each time the device records a specified value or interval. For example, you can set the device to alert you every 30 minutes.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Alerts and Prompts**.
- 4 Select an alert type.
- 5 Turn on the alert.
- 6 Enter a value.
- 7 Select .

Each time you reach the alert value, a message appears. The device also beeps if audible tones are turned on ([Turning the Device Tones On and Off, page 65](#)).



## Setting Smart Eat and Drink Alerts

A smart alert notifies you to eat or drink at strategic intervals based on current ride conditions. Smart alert estimates for a ride are based on the temperature, elevation gain, speed, duration, and heart rate and power data (if applicable).

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Alerts and Prompts**.
- 4 Select **Eat Alert** or **Drink Alert**.
- 5 Turn on the alert.
- 6 Select **Type** > **Smart**.

Each time you reach the estimated smart alert value, a message appears. The device also beeps if audible tones are turned on ([Turning the Device Tones On and Off, page 65](#)).

## Auto Lap®

### Marking Laps by Position

You can use the Auto Lap® feature to mark the lap at a specific position automatically. This feature is helpful for comparing your performance over different parts of a ride (for example, a long climb or training sprints). During courses, you can use the By Position option to trigger laps at all of the lap positions saved in the course.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Alerts and Prompts** > **Lap**.
- 4 Turn on the **Auto Lap** alert.
- 5 Select **Auto Lap Trigger** > **By Position**.
- 6 Select **Lap At**.
- 7 Select an option:
  - Select **Lap Press Only** to trigger the lap counter each time you press  and each time you pass any of those locations again.
  - Select **Start and Lap** to trigger the lap counter at the GPS location where you press  and at any location during the ride where you press .
  - Select **Mark and Lap** to trigger the lap counter at a specific GPS location marked before the ride and at any location during the ride where you press .
- 8 If necessary, customize the lap data fields ([Adding a Data Screen, page 58](#)).

### Marking Laps by Distance

You can use the Auto Lap® feature to mark the lap at a specific distance automatically. This feature is helpful for comparing your performance over different parts of a ride (for example, every 10 miles or 40 kilometers).

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Alerts and Prompts** > **Lap**.
- 4 Turn on the **Auto Lap** alert.
- 5 Select **Auto Lap Trigger** > **By Distance**.
- 6 Select **Lap At**.
- 7 Enter a value.
- 8 Select .
- 9 If necessary, customize the lap data fields ([Adding a Data Screen, page 58](#)).

### Marking Laps by Time

You can use the Auto Lap® feature to mark the lap at a specific time automatically. This feature is helpful for comparing your performance over different parts of a ride (for example, every 20 minutes).

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Alerts and Prompts** > **Lap**.
- 4 Turn on the **Auto Lap** alert.



- 5 Select **Auto Lap Trigger > By Time**.
- 6 Select **Lap At**.
- 7 Select the hours, minutes, or seconds value.
- 8 Select  or  to enter a value.
- 9 Select .
- 10 If necessary, customize the lap data fields ([Adding a Data Screen, page 58](#)).

### Customizing the Lap Banner

You can customize the data fields that appear in the lap banner.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Alerts and Prompts > Lap**.
- 4 Turn on the **Auto Lap** alert.
- 5 Select **Custom Lap Banner**.
- 6 Select a data field to change it.

### Using Auto Sleep

You can use the Auto Sleep feature to automatically enter sleep mode after 5 minutes of inactivity. During sleep mode, the screen is turned off and sensors, Bluetooth® technology, and GPS are disabled.

Wi-Fi® continues to run while the device is asleep.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Auto Sleep**.

### Using Auto Pause

You can use the Auto Pause® feature to pause the timer automatically when you stop moving or when your speed drops below a specified value. This feature is helpful if your ride includes stop lights or other places where you need to slow down or stop.

**NOTE:** History is not recorded while the activity timer is stopped or paused.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Timer > Auto Pause**.
- 4 Select an option:
  - Select **When Stopped** to pause the timer automatically when you stop moving.
  - Select **Custom** to pause the timer automatically when your speed drops below a specified value.
- 5 If necessary, customize optional time data fields ([Adding a Data Screen, page 58](#)).

### Starting the Timer Automatically

This feature automatically detects when your device has acquired satellites and is moving. It starts the activity timer or reminds you to start the activity timer so you can record your ride data.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Timer > Timer Start Mode**.
- 4 Select an option:
  - Select **Manual**, and select  to start the activity timer.
  - Select **Prompted** to display a visual reminder when you reach the start notice speed.
  - Select **Auto** to start the activity timer automatically when you reach the start speed.

### Using Auto Scroll

You can use the Auto Scroll feature to automatically cycle through all of the training data screens while the timer is running.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Data Screens > ⋮ > Auto Scroll**.

- 4 Select a display speed.

## Locking and Unlocking the Bike Computer

You can enable the Auto Lock option to automatically lock the bike computer to prevent accidental button presses during a ride.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Auto Lock**.

During a ride, hold any button to unlock the device.

## Changing the Satellite Setting

Using GPS and another satellite together reduces battery life more quickly than using only GPS.

- 1 Select  > **Activity Profiles**.
- 2 Select a profile.
- 3 Select **Satellite Systems**.
- 4 Select an option.

## Phone Settings

Select  > **Connected Features** > **Phone**.

**Enable:** Enables Bluetooth®.

**NOTE:** Other Bluetooth settings appear only when you enable Bluetooth technology.

**Friendly Name:** Allows you to enter a friendly name that identifies your devices with Bluetooth.

**Pair Smartphone:** Connects your device with a compatible Bluetooth enabled phone. This setting allows you to use Bluetooth connected features, including LiveTrack and activity uploads to Garmin Connect™.

**Sync Now:** Allows you to sync your device with your compatible phone.

**Smart Notifications:** Allows you to enable phone notifications from your compatible phone.

**Missed Notifications:** Displays missed phone notifications from your compatible phone.

**Text Reply Signature:** Enables signatures in your text message replies. This feature is available with compatible Android™ phones.

## System Settings

Select  > **System**.

- Display Settings ([Display Settings, page 63](#))
- Widget Settings ([Customizing the Widget Loop, page 64](#))
- Data Recording Settings ([Data Recording Settings, page 64](#))
- Unit Settings ([Changing the Units of Measure, page 64](#))
- Tone Settings ([Turning the Device Tones On and Off, page 65](#))
- Language Settings ([Changing the Device Language, page 65](#))

## Display Settings

Select  > **System** > **Display**.

**Auto Brightness:** Automatically adjusts the backlight brightness based on the ambient light.

**Brightness:** Sets the backlight brightness.

**Backlight Timeout:** Sets the length of time before the backlight turns off.

**Color Mode:** Sets the device to display dark or light colors. You can select the Auto option to allow the device to set dark or light colors automatically based on the time of day.

**Screen Capture:** Allows you to save the image on the device screen when you press .

### Using the Backlight

You can select any key to turn on the backlight.

You can adjust the backlight timeout ([Display Settings, page 63](#)).

- 1 Select  > **System** > **Display**.
- 2 Select an option:
  - To allow the device to automatically adjust the brightness based on the ambient light, enable **Auto Brightness**.

- To manually adjust the brightness, disable **Auto Brightness**, select **Brightness**, and select  $\wedge$  or  $\vee$ .

## Customizing the Glances

- 1 Scroll to the bottom of the home screen.
- 2 Select .
- 3 Select an option:
  - Select **Add Glances** to add a glance to the glance loop.
  - Select a glance, and select **Reorder** to change the location of the glance in the glance loop.
  - Select a glance, and select **Remove** to remove the glance from the glance loop.

## Customizing the Widget Loop

You can change the order of widgets in the widget loop, remove widgets, and add new widgets.

- 1 Select  > **System** > **Widgets**.
- 2 Select an option:
  - Select **Add Widgets** to add a widget to the widget loop.
  - Select a widget, and select **Reorder** to change the location of the widget in the widget loop.
  - Select a widget, and select **Remove** to remove the widget from the widget loop.

## Data Recording Settings

Select  > **System** > **Data Recording**.

**Cadence Averaging:** Controls whether the device includes zero values for cadence data that occur when you are not pedaling ([Data Averaging for Cadence or Power, page 50](#)).

**Power Averaging:** Controls whether the device includes zero values for power data that occur when you are not pedaling ([Data Averaging for Cadence or Power, page 50](#)).


**Log HRV:** Sets the device to record your heart rate variability during an activity.

**5Hz GPS:** Sets the device to record high frequency data during downhill runs ([5Hz Data Recording, page 64](#)).

### 5Hz Data Recording

The Edge® 550 can record data at 5Hz, allowing you to analyze your position during downhill descents, known as runs, with more accuracy.

If enabled, the device records data at 5Hz during the downhill and descending runs for the **Enduro MTB** and **Downhill MTB** activity profiles ([Biking Activity Profiles, page 57](#)). The Edge bike computer displays a 5Hz indicator on the ride timer during a run, and on the ride summary.

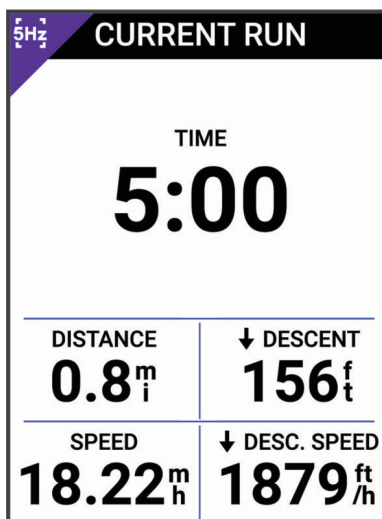

The bike computer does not record data at 5Hz while in battery saver mode.

After you complete and save a ride, you can view a detailed analysis of 5Hz descent data on your Garmin Connect™ account ([Garmin Connect, page 45](#)).

## Changing the Units of Measure

You can customize units of measure for distance and speed, elevation, temperature, weight, position format, and time format.

- 1 Select  > **System** > **Units**.
- 2 Select a measurement type.
- 3 Select a unit of measure for the setting.

### Turning the Device Tones On and Off

- 1 Select  > **System**.
- 2 Select an option:
  - To change the setting for alerts and notifications, select **Tones**.
  - To change the setting for key presses, select **Key Tones**.

### Changing the Device Language

Select  > **System** > **Language**.

### Time Zones

Each time you turn on the device and acquire satellites or sync with your phone, the device automatically detects your time zone and the current time of day.

### Setting Up Extended Display Mode

You can use your Edge® 550 bike computer as an extended display to view data screens from a compatible Garmin® multisport watch. For example, you can pair a compatible Forerunner® watch to display its data screens on your Edge bike computer during a triathlon.

- 1 From your Edge bike computer, select  > **Extended Display** > **Pair Watch**.
- 2 From your compatible Garmin watch, select **Settings** > **Connectivity** > **Sensors & Accessories** > **Add New** > **Extended Display**.
- 3 Follow the on-screen instructions on your Edge bike computer and Garmin watch to complete the pairing process.

The data screens from your paired watch appear on the Edge bike computer when the devices are paired.

**NOTE:** Normal Edge functions are disabled while using Extended Display mode.

After pairing your compatible Garmin watch with your Edge bike computer, they connect automatically the next time you use Extended Display mode.

### Exiting Extended Display Mode

While the device is in Extended Display mode, press  > **Exit Extended Display Mode** > .

# Device Information

## Charging the Device

### NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

**NOTE:** The device will not charge when outside the approved temperature range (*Edge® Specifications*, page 71).

- 1 Pull up the weather cap ① from the USB port ②.



- 2 Plug the cable into the charging port on the device.
  - 3 Plug the other end of the cable into a USB charging port.  
When you connect the device to a power source, the device turns on.
  - 4 Charge the device completely.
- After you charge the device, close the weather cap.

## About the Battery

### ⚠ WARNING


This device contains a lithium-ion battery. See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

## Installing the Standard Mount


For the best GPS reception and screen visibility, position the bike mount so the device is horizontal to the ground and the front of the device is oriented toward the sky. You can install the bike mount on the stem or the handlebar.

**NOTE:** If you do not have this mount, you can skip this task.

- 1 Select a secure location to mount the device where it does not interfere with the safe operation of your bike.
- 2 Place the rubber disk ① on the back of the bike mount.  
Two rubber disks are included, and you can select the disk that best fits your bike. The rubber tabs align with the back of the bike mount so it stays in place.

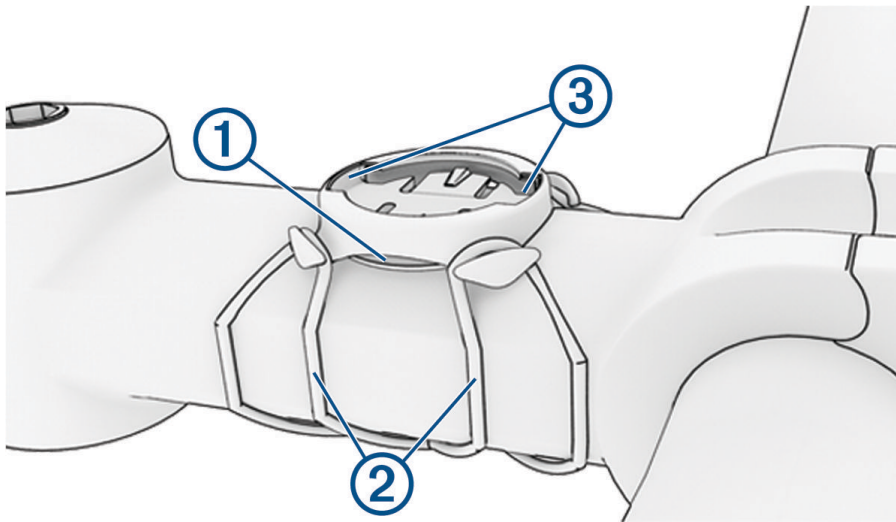

- 3 Place the bike mount on the bike stem.
- 4 Attach the bike mount securely using the two bands ②.
- 5 Align the tabs on the back of the device with the bike mount notches ③.
- 6 Press down slightly and turn the device clockwise until it locks into place.

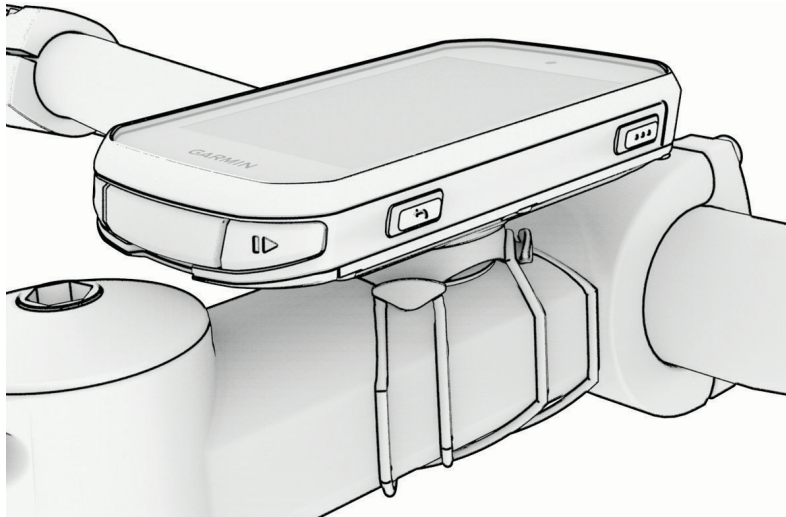

## Installing the Out-Front Mount

**NOTE:** If you do not have this mount, you can skip this task.

- 1 Select a secure location to mount the Edge® bike computer where it does not interfere with the safe operation of your bike.
- 2 Use the hex key to remove the screw ① from the handlebar connector ②.




- 3 Place the rubber pad around the handlebar:
  - If the handlebar diameter is 25.4 mm or 26 mm, use the thicker pad.
  - If the handlebar diameter is 31.8 mm, use the thinner pad.
  - If the handlebar diameter is 35 mm, do not use a rubber pad.

- 4 Place the handlebar connector around the rubber pad.

- 5 Replace and tighten the screw.

**NOTE:** Garmin® recommends tightening the screw so the mount is secure, with a maximum torque specification of 7 lbf-in. (0.8 N-m). You should check the tightness of the screw periodically.

- 6 Align the tabs on the back of the Edge bike computer with the bike mount notches (3).

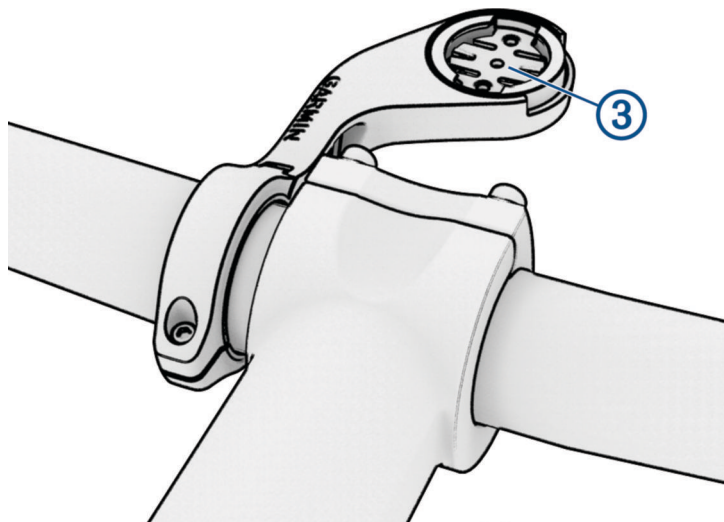

- 7 Press down slightly and turn the Edge bike computer clockwise until it locks into place.

### Releasing the Edge®


- 1 Turn the Edge clockwise to unlock the device.
- 2 Lift the Edge off the mount.

### Installing the Mountain Bike Mount

**NOTE:** If you do not have this mount, you can skip this task.


- 1 Select a secure location to mount the Edge® device where it does not interfere with the safe operation of your bike.
- 2 Use the 3 mm hex key to remove the screw (1) from the handlebar connector (2).



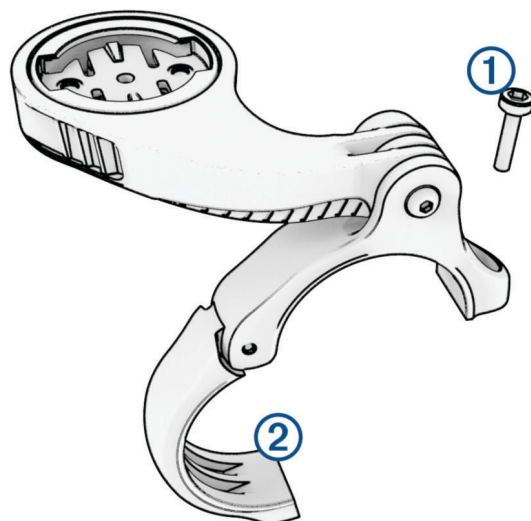


- 3 Select an option:
  - If the handlebar diameter is 25.4 mm or 26 mm, place the thicker pad around the handlebar.
  - If the handlebar diameter is 31.8 mm, place the thinner pad around the handlebar.
  - If the handlebar diameter is 35 mm, do not use a rubber pad.
- 4 Place the handlebar connector around the handlebar, so that the mount arm is above the bike stem.
- 5 Use the 3 mm hex key to loosen the screw (3) on the mount arm, position the mount arm, and tighten the screw.

**NOTE:** Garmin® recommends tightening the screw so the mount arm is secure, with a maximum torque specification of 20 lbf-in. (2.26 N-m). You should check the tightness of the screw periodically.

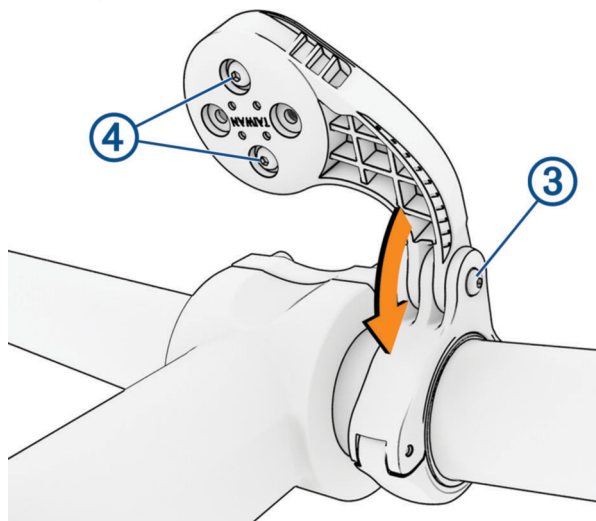

- 6 If necessary, use the 2 mm hex key to remove the two screws on the back side of the mount (4), remove and rotate the connector, and replace the screws to change the orientation of the mount.
  - 7 Replace and tighten the screw on the handlebar connector.
- NOTE:** Garmin recommends tightening the screw so the mount is secure, with a maximum torque specification of 7 lbf-in. (0.8 N-m). You should check the tightness of the screw periodically.
- 8 Align the tabs on the back of the Edge device with the bike mount notches (5).

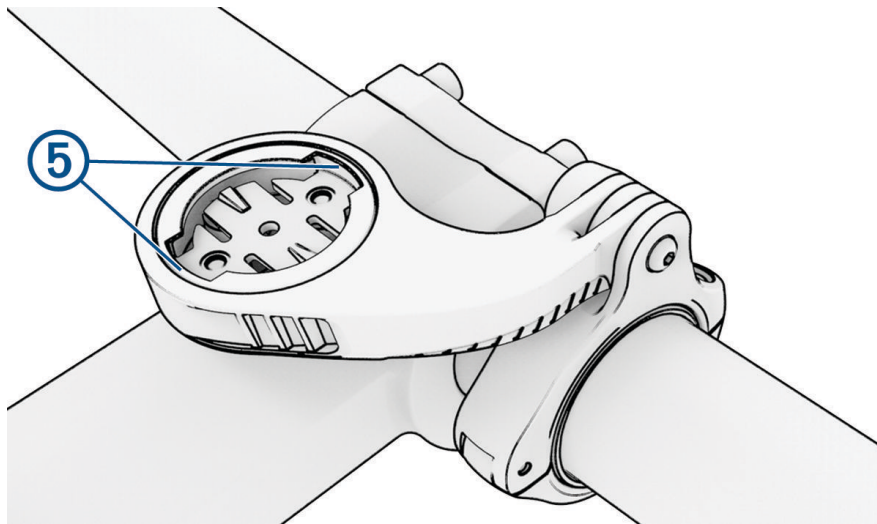


9 Press down slightly and turn the Edge device clockwise until it locks into place.

## Attaching a Tether

You can use the optional tether to secure the Edge® bike computer to your handlebar.

1 Starting from the back of the device, insert the loop of the tether ① through the slot in the device.

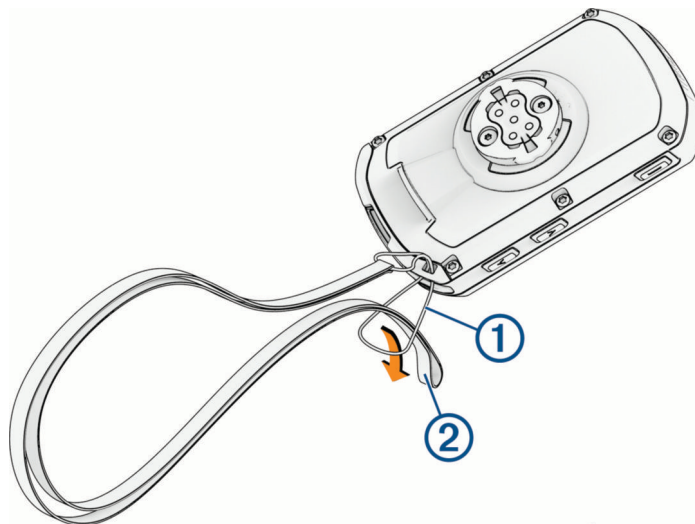

2 Thread the other end of the tether ② through the loop, and pull it tight.

## Product Updates

Your device automatically checks for updates when paired with a phone using Bluetooth® technology or when connected to Wi-Fi®. You can manually check for updates from the system settings ([System Settings, page 63](#)). On your computer, install Garmin Express™ ([garmin.com/express](http://garmin.com/express)). On your phone, install the Garmin Connect™ app.

This provides easy access to these services for Garmin® devices:

- Software updates
- Map updates
- **NOTE:** Map updates are available through Garmin Express.
- Data uploads to the Garmin Connect app on your phone
- Product registration

## Updating the Software Using the Garmin Connect™ App

Before you can update your device software using the Garmin Connect app, you must have a Garmin Connect account, and you must pair the device with a compatible phone ([Pairing Your Phone, page 37](#)).

Sync your device with the Garmin Connect app.

When new software is available, the Garmin Connect app automatically sends the update to your device.

## Updating the Software Using Garmin Express™

Before you can update your device software, you must have a Garmin Connect™ account, and you must download the Garmin Express application.

- 1 Connect the device to your computer using the USB cable.

When new software is available, Garmin Express sends it to your device.

- 2 Follow the on-screen instructions.

- 3 Do not disconnect your device from the computer during the update process.

If you have already set up your device with Wi-Fi connectivity, Garmin Connect can automatically download available software updates to your device when it connects using Wi-Fi.

## Specifications

### Edge® Specifications

|                             |                                                                                                                   |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------|
| Battery type                | Rechargeable, built-in lithium-ion battery                                                                        |
| Battery life                | Up to 12 hours<br>Up to 36 hours in battery saver mode ( <a href="#">Turning On Battery Saver Mode, page 73</a> ) |
| Operating temperature range | From -20° to 60°C (from -4° to 140°F)                                                                             |
| Charging temperature range  | From 0° to 45°C (from 32° to 113°F)                                                                               |
| Wireless frequencies        | 2.4 GHz: < 18.5 dBm                                                                                               |
| EU SAR                      | 0,28 w/kg torso; 0,28 w/kg limb                                                                                   |
| Water rating                | IEC 60529 IPX7 <sup>1</sup>                                                                                       |

## Viewing Device Information

You can view device information, such as the unit ID, software version, and license agreement.

Select  > **System** > **About** > **Copyright Info**.

## Viewing Regulatory and Compliance Information

The label for this device is provided electronically. The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, as well as applicable product and licensing information.

- 1 Select .

- 2 Select **System** > **Regulatory Info**.

## Device Care

### NOTICE

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Avoid chemical cleaners, solvents, sunscreen, and insect repellents that can damage plastic components and finishes.

Secure the weather cap tightly to prevent damage to the USB port.

Avoid extreme shock and harsh treatment, because it can degrade the life of the product.

## Cleaning the Device

### NOTICE

Even small amounts of sweat or moisture can cause corrosion of the electrical contacts when connected to a charger. Corrosion can prevent charging and data transfer.

- 1 Wipe the device using a cloth dampened with a mild detergent solution.

- 2 Wipe it dry.

After cleaning, allow the device to dry completely.

<sup>1</sup> The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to [www.garmin.com/waterrating](http://www.garmin.com/waterrating).

## **Cleaning the USB Port**

- 1** Turn off the device and disconnect the device from power.
- 2** Clean the USB port using a soft, clean, lint-free cloth or cotton swab.  
**NOTE:** If necessary, you can lightly dampen the cloth or cotton swab with isopropyl alcohol.
- 3** Allow the device to dry completely before you connect it to power.

# Troubleshooting

## Resetting the Edge® Bike Computer

If the bike computer stops responding, you may need to reset it. This does not erase any of your data or settings.

Hold  for 12 seconds.

The bike computer resets and turns on.

## Restoring the Default Settings

You can restore the default configuration settings and activity profiles. This will not remove your history or activity data, such as rides, workouts, and courses.

Select  > **System** > **Device Reset** > **Reset Default Settings** > .

## Clearing User Data and Settings

You can clear all user data and restore the device to its initial setup. This removes your history and data, such as rides, workouts, and courses, and resets the device settings and activity profiles. This will not remove any files you added to the device from your computer.

Select  > **System** > **Device Reset** > **Delete Data and Reset Settings** > .

## Exiting Demo Mode

Demo mode shows a preview of features on your Edge® bike computer.

1 Press  eight times.

2 Select .

## Maximizing Battery Life

- Turn on **Battery Saver** ([Turning On Battery Saver Mode, page 73](#)).
- Decrease the backlight brightness or enable the **Auto Brightness** setting ([Display Settings, page 63](#)).
- Shorten the backlight timeout ([Display Settings, page 63](#)).
- Turn on the **Auto Sleep** feature ([Using Auto Sleep, page 62](#)).
- Turn off the **Phone** wireless feature ([Phone Settings, page 63](#)).
- Select the **GPS** setting ([Changing the Satellite Setting, page 63](#)).
- Remove wireless sensors that you no longer use.

## Turning On Battery Saver Mode

Battery saver mode allows you to adjust the settings to extend the battery life for longer rides.

1 Select  > **Battery Saver** > **Enable**.

2 Select an option:

- Select **Reduce Backlight** to reduce the backlight brightness.
- Select **Hide Map** to hide the map screen.

**NOTE:** When this option is enabled, navigation turn prompts still appear.

- Select **Satellite Systems** to change the satellite setting.

The estimated battery life remaining appears at the top of the screen.

After your ride, you should charge your device and disable battery saver mode to use all the device features.

## My phone will not connect to the device

If your phone will not connect to the device, you can try these tips.

- Turn off your phone and your device, and turn them back on again.
- Enable Bluetooth® technology on your phone.
- Update the Garmin Connect™ app to the latest version.
- Remove your device from the Garmin Connect app and the Bluetooth settings on your phone to retry the pairing process.
- If you bought a new phone, remove your device from the Garmin Connect app on the phone you intend to stop using.
- Bring your phone within 10 m (33 ft.) of the device.

- On your phone, open the Garmin Connect app, select **⋮**, and select **Garmin Devices > Add Device** to enter pairing mode.
- You can hold **⋮**, and select **Connected Features > Phone > Pair Smartphone** to manually enter pairing mode.

## Improving GPS Satellite Reception

- Frequently sync the device to your Garmin® account:
  - Connect your device to a computer using the USB cable and the Garmin Express™ application.
  - Sync your device to the Garmin Connect™ app using your Bluetooth® enabled phone.
  - Connect your device to your Garmin account using a Wi-Fi® wireless network.
 While connected to your Garmin account, the device downloads several days of satellite data, allowing it to quickly locate satellite signals.
- Take your device outside to an open area away from tall buildings and trees.
- Remain stationary for a few minutes.

## My device is in the wrong language

- 1 Hold **⋮**.
- 2 Scroll down to the tenth item in the list, and select it.
- 3 Scroll down to the eleventh item in the list, and select it.
- 4 Select your language.

## Setting Your Elevation

If you have accurate elevation data for your present location, you can manually calibrate the altimeter on your device.

- 1 Select **Navigation > ⋮ > Set Elevation**.
- 2 Enter the elevation, and select **✓**.

## Temperature Readings

The device may display temperature readings that are higher than the actual air temperature if the device is placed in direct sunlight, held in your hand, or is charging with an external battery pack. Also, the device will take some time to adjust to significant changes in temperature.

## Calibrating the Barometric Altimeter

Your device was already calibrated at the factory, and the device uses automatic calibration at your GPS starting point by default. You can manually calibrate the barometric altimeter if you know the correct elevation.

- 1 Hold **⋮**, and select **System > Altimeter**.
- 2 Select an option:
  - To calibrate automatically from your GPS starting point, select **Auto Cal.**
  - To enter the current elevation manually, select **Calibrate > Enter Manually**.
  - To enter the current elevation from the digital elevation model (DEM), select **Calibrate > Use DEM**.
  - To enter the current elevation from your GPS starting point, select **Calibrate > Use GPS**.

## Calibrating the Compass

### NOTICE

Calibrate the electronic compass outdoors. To improve heading accuracy, do not stand near objects that influence magnetic fields, such as vehicles, buildings, and overhead power lines.

Your device was already calibrated at the factory, and the device uses automatic calibration by default. If you experience irregular compass behavior, for example, after moving long distances or after extreme temperature changes, you can manually calibrate the compass.

- 1 Hold **⋮**, and select **System > Calibrate Compass**.
- 2 Select **Calibrate**, and follow the on-screen instructions.

## Replacement O-rings

Replacement bands (O-rings) are available for the mounts.

**NOTE:** Use Ethylene Propylene Diene Monomer (EPDM) replacement bands only. Go to <http://buy.garmin.com>, or contact your Garmin® dealer.

## Getting More Information

- Go to [support.garmin.com](http://support.garmin.com) for additional manuals, articles, and software updates.
- Go to [buy.garmin.com](http://buy.garmin.com), or contact your Garmin® dealer for information about optional accessories and replacement parts.



# Appendix

## Data Fields

**NOTE:** Not all data fields are available for all activity types. Some data fields require compatible accessories to display data. Some data fields appear in more than one category on the device. Some data fields are groups of related data, such as cadence or power.

**TIP:** You can also customize the data fields from the device settings in the Garmin Connect™ app.

### Cadence Fields

| Name        | Description                                                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------|
| Avg Cadence | Cycling. The average cadence for the current activity.                                                                             |
| Cadence     | Cycling. The number of revolutions of the crank arm. Your device must be connected to a cadence accessory for this data to appear. |
| Lap Cadence | Cycling. The average cadence for the current lap.                                                                                  |

### Cycling Dynamics

| Name                   | Description                                                                                                                                                    |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Avg L. Peak Pwr Phase  | The average power phase peak angle for the left leg for the current activity.                                                                                  |
| Avg Left Pwr Phase     | The average power phase angle for the left leg for the current activity.                                                                                       |
| Avg PCO                | The average platform center offset for the current activity.                                                                                                   |
| Avg Right Pwr Phase    | The average power phase angle for the right leg for the current activity.                                                                                      |
| Avg R. Peak Pwr Phase  | The average power phase peak angle for the right leg for the current activity.                                                                                 |
| Lap L. Peak Pwr Phase  | The average power phase peak angle for the left leg for the current lap.                                                                                       |
| Lap Left Pwr Phase     | The average power phase angle for the left leg for the current lap.                                                                                            |
| Lap PCO                | The average platform center offset for the current lap.                                                                                                        |
| Lap R. Peak Pwr Phase  | The average power phase peak angle for the right leg for the current lap.                                                                                      |
| Lap Right Pwr Phase    | The average power phase angle for the right leg for the current lap.                                                                                           |
| Lap Time Seated        | The time spent seated while pedaling for the current lap.                                                                                                      |
| Lap Time Standing      | The time spent standing while pedaling for the current lap.                                                                                                    |
| Left Peak Pwr Phase    | The current power phase peak angle for the left leg. Power phase peak is the angle range over which the rider produces the peak portion of the driving force.  |
| Left Power Phase       | The current power phase angle for the left leg. Power phase is the pedal stroke region where positive power is produced.                                       |
| Platform Center Offset | The platform center offset. Platform center offset is the location on the pedal platform where force is applied.                                               |
| Right Peak Pwr Phase   | The current power phase peak angle for the right leg. Power phase peak is the angle range over which the rider produces the peak portion of the driving force. |
| Right Power Phase      | The current power phase angle for the right leg. Power phase is the pedal stroke region where positive power is produced.                                      |
| Time Seated            | The time spent seated while pedaling for the current activity.                                                                                                 |
| Time Standing          | The time spent standing while pedaling for the current activity.                                                                                               |

### Distance Fields

| Name              | Description                                                                                                 |
|-------------------|-------------------------------------------------------------------------------------------------------------|
| Distance          | The distance traveled for the current track or activity.                                                    |
| Lap Distance      | The distance traveled for the current lap.                                                                  |
| Last Lap Distance | The distance traveled for the last completed lap.                                                           |
| Distance Ahead    | The distance ahead or behind the Virtual Partner®.                                                          |
| Odometer          | A running tally of distance traveled for all trips. This total does not clear when resetting the trip data. |

## eBike

| Name               | Description                                                                                                      |
|--------------------|------------------------------------------------------------------------------------------------------------------|
| Assist Mode        | The current eBike assistance mode.                                                                               |
| eBike Battery      | The remaining battery power of an eBike.                                                                         |
| Shifting Advice    | The recommendation to shift up or down based on your current effort. Your eBike must be in manual shifting mode. |
| Travel Range       | The estimated distance you can travel based on the current eBike settings and remaining battery power.           |
| Smart Travel Range | The estimated remaining distance the eBike will provide assistance, taking into account the local terrain.       |

## Elevation Fields

| Name                        | Description                                                                                                                                           |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| 30s VAM                     | The 30-second moving average of the average ascent velocity.                                                                                          |
| 30s Vertical Descent Speed  | The 30-second moving average rate of descent.                                                                                                         |
| Asc. to Next Course Pt.     | The remaining ascent to the next point on the course.                                                                                                 |
| Ascent Remaining            | During a workout or course, the remaining ascent when you are using an elevation target.                                                              |
| Avg VAM                     | The average ascent velocity for the current activity.                                                                                                 |
| Avg. Vertical Descent Speed | The average rate of descent.                                                                                                                          |
| Elevation                   | The altitude of your current location above or below sea level.                                                                                       |
| Grade                       | The calculation of rise (elevation) over run (distance). For example, if for every 3 m (10 ft.) you climb you travel 60 m (200 ft.), the grade is 5%. |
| Lap Ascent                  | The vertical distance of ascent for the current lap.                                                                                                  |
| Lap Descent                 | The vertical distance of descent for the current lap.                                                                                                 |
| Lap VAM                     | The average ascent velocity for the current lap.                                                                                                      |
| Lap Vertical Descent Speed  | The rate of descent for the current lap.                                                                                                              |
| Total Ascent                | The total elevation distance ascended since the last reset.                                                                                           |
| Total Descent               | The total elevation distance descended since the last reset.                                                                                          |
| VAM                         | The average ascent velocity for the current activity.                                                                                                 |
| Vertical Descent Speed      | The rate of descent over time.                                                                                                                        |

## Force

| Name                 | Description                                                                              |
|----------------------|------------------------------------------------------------------------------------------|
| 3s Force             | The 3-second moving average of force applied to the pedal platforms, in Newtons.         |
| 10s Force            | The 10-second moving average of force applied to the pedal platforms, in Newtons.        |
| 30s Force            | The 30-second moving average of force applied to the pedal platforms, in Newtons.        |
| Avg Force            | The average force applied to the pedal platforms during the activity, in Newtons.        |
| Force                | The force applied to the pedal platforms, in Newtons.                                    |
| Lap Force            | The average force applied to the pedal platforms during the current lap, in Newtons.     |
| Lap Norm. Force      | The normalized force applied to the pedal platforms during the current lap, in Newtons.  |
| Last Lap Force       | The average force applied to the pedal platforms during the previous lap, in Newtons.    |
| Last Lap Norm. Force | The normalized force applied to the pedal platforms during the previous lap, in Newtons. |
| Max. Force           | The maximum force applied to the pedal platforms during the activity, in Newtons.        |
| Max. Lap Force       | The maximum force applied to the pedal platforms during the current lap, in Newtons.     |
| Normalized Force     | The normalized force applied to the pedal platforms, in Newtons.                         |

## Gears

| Name              | Description                                                                                  |
|-------------------|----------------------------------------------------------------------------------------------|
| Di2 Battery Level | The remaining battery power of a Di2 sensor.                                                 |
| Di2 Shift Mode    | The current shift mode of a Di2 sensor.                                                      |
| Front Gear        | The front bike gear from a gear position sensor.                                             |
| Gear Battery      | The battery status of a gear position sensor.                                                |
| Gear Combo        | The current gear combination from a gear position sensor.                                    |
| Gears             | The front and rear bike gears from a gear position sensor.                                   |
| Gear Ratio        | The number of teeth on the front and rear bike gears, as detected by a gear position sensor. |
| Rear Gear         | The rear bike gear from a gear position sensor.                                              |

## Graphical

| Name             | Description                                                                                                  |
|------------------|--------------------------------------------------------------------------------------------------------------|
| Cadence Bars     | A bar graph showing your current, average, and maximum cycling cadence values for the current activity.      |
| Cadence Graph    | A line graph showing your cycling cadence values for the current activity.                                   |
| Compass          | A visual representation of the direction in which the device is pointing.                                    |
| Elevation Graph  | A line graph showing your current elevation, total ascent, and total descent for the current activity.       |
| Heart Rate Bars  | A bar graph showing your current, average, and maximum heart rate values for the current activity.           |
| Heart Rate Graph | A line graph showing your current, average, and maximum heart rate values for the current activity.          |
| HR Zone Bar      | A bar graph showing your current heart rate zone (1 to 5).                                                   |
| Map              | A visual representation of the surrounding physical features and direction in which the device is traveling. |
| 3s Power Bar     | A bar graph showing your 3-second average power output value for the current activity.                       |
| 3s Power Graph   | A line graph showing your 3-second average power output value for the current activity.                      |
| Speed Bars       | A bar graph showing your current, average, and maximum speed values for the current activity.                |
| Speed Graph      | A line graph showing your speed for the current activity.                                                    |

## Heart Rate Fields

| Name                      | Description                                                                                                                                                                   |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| %Heart Rate Reserve       | The percentage of heart rate reserve (maximum heart rate minus resting heart rate).                                                                                           |
| %Max Heart Rate           | The percentage of maximum heart rate.                                                                                                                                         |
| Aerobic Training Effect   | The impact of the current activity on your aerobic fitness level.                                                                                                             |
| Anaerobic Training Effect | The impact of the current activity on your anaerobic fitness level.                                                                                                           |
| Avg %HRR                  | The average percentage of heart rate reserve (maximum heart rate minus resting heart rate) for the current activity.                                                          |
| Avg Heart Rate            | The average heart rate for the current activity.                                                                                                                              |
| Avg %Max Heart Rate       | The average percentage of maximum heart rate for the current activity.                                                                                                        |
| Heart Rate                | Your heart rate in beats per minute (bpm). Your device must be connected to a compatible heart rate monitor or another device that has wrist-based heart rate.                |
| Heart Rate Zone           | The current range of your heart rate (1 to 5). The default zones are based on your user profile and maximum heart rate (220 minus your age).                                  |
| Lap %HRR                  | The average percentage of heart rate reserve (maximum heart rate minus resting heart rate) for the current lap.                                                               |
| Lap Heart Rate            | The average heart rate for the current lap.                                                                                                                                   |
| Lap %Max Heart Rate       | The average percentage of maximum heart rate for the current lap.                                                                                                             |
| Last Lap Heart Rate       | The average heart rate for the last completed lap.                                                                                                                            |
| Load                      | The training load for the current activity. Training load is the amount of excess post-exercise oxygen consumption (EPOC), which indicates the strenuousness of your workout. |

| Name             | Description                                         |
|------------------|-----------------------------------------------------|
| Respiration Rate | Your respiration rate in breaths per minute (brpm). |
| Time in Zone     | The time elapsed in each heart rate or power zone.  |

## Lights

| Name              | Description                                            |
|-------------------|--------------------------------------------------------|
| Battery Status    | The remaining battery power of a bike light accessory. |
| Beam Angle Status | The headlight beam mode.                               |
| Light Mode        | The light network configuration mode.                  |
| Lights Connected  | The number of connected lights.                        |

## MTB Performance

| Name     | Description                                                                                                          |
|----------|----------------------------------------------------------------------------------------------------------------------|
| 60s Flow | The 60-second moving average of the flow score.                                                                      |
| 60s Grit | The 60-second moving average of the grit score.                                                                      |
| Flow     | The measurement of how consistently you maintain speed and smoothness through turns in the current activity.         |
| Grit     | The measurement of difficulty for the current activity based on elevation, gradient, and rapid changes in direction. |
| Lap Flow | The overall flow score for the current lap.                                                                          |
| Lap Grit | The overall grit score for the current lap.                                                                          |

## Navigation Fields

| Name                    | Description                                                                                                                                                                |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ascent Remaining        | During a workout or course, the remaining ascent when you are using an elevation target.                                                                                   |
| Asc. to Next Course Pt. | The remaining ascent to the next point on the course.                                                                                                                      |
| Course Pt. Distance     | The remaining distance to the next point on the course.                                                                                                                    |
| Destination Location    | The position of your final destination.                                                                                                                                    |
| Dist. to Point          | The remaining distance to the next point.                                                                                                                                  |
| Distance to Destination | The remaining distance to the final destination. You must be navigating for this data to appear.                                                                           |
| Distance to Next        | The remaining distance to the next waypoint on the route. You must be navigating for this data to appear.                                                                  |
| ETA at Destination      | The estimated time of day when you will reach the final destination (adjusted to the local time of the destination). You must be navigating for this data to appear.       |
| ETA at Next             | The estimated time of day when you will reach the next waypoint on the route (adjusted to the local time of the waypoint). You must be navigating for this data to appear. |
| Heading                 | The direction you are moving.                                                                                                                                              |
| Next Waypoint           | The next point on the route. You must be navigating for this data to appear.                                                                                               |
| Time to Destination     | The estimated time remaining before you reach the destination. You must be navigating for this data to appear.                                                             |
| Time to Next            | The estimated time remaining before you reach the next waypoint in the route. You must be navigating for this data to appear.                                              |
| Time to Point           | The remaining time to the next point.                                                                                                                                      |

## Other Fields

| Name                | Description                                            |
|---------------------|--------------------------------------------------------|
| Battery Level       | The remaining battery power.                           |
| Calories            | The amount of total calories burned.                   |
| GPS Signal Strength | The strength of the GPS satellite signal.              |
| Laps                | The number of laps completed for the current activity. |

| Name                        | Description                                                                                                 |
|-----------------------------|-------------------------------------------------------------------------------------------------------------|
| Performance Condition       | The performance condition score is a real-time assessment of your ability to perform.                       |
| Sunrise                     | The time of sunrise based on your GPS position.                                                             |
| Sunset                      | The time of sunset based on your GPS position.                                                              |
| Temperature                 | The temperature of the air. Your body temperature affects the temperature sensor.                           |
| Time of Day                 | The time of day based on your current location and time settings (format, time zone, daylight saving time). |
| 24-Hour Minimum Temperature | The minimum temperature recorded in the last 24 hours from a compatible temperature sensor.                 |
| 24-Hour Maximum Temperature | The maximum temperature recorded in the last 24 hours from a compatible temperature sensor.                 |

## Power Fields

| Name                 | Description                                                                                         |
|----------------------|-----------------------------------------------------------------------------------------------------|
| %FTP                 | The current power output as a percentage of functional threshold power.                             |
| 3s Balance           | The 3-second moving average of the left/right power balance.                                        |
| 3s Power             | The 3-second moving average of power output.                                                        |
| 3s Watts/kg          | The 3-second moving average of power output in watts per kilogram.                                  |
| 10s Balance          | The 10-second moving average of the left/right power balance.                                       |
| 10s Power            | The 10-second moving average of power output.                                                       |
| 10s Watts/kg         | The 10-second moving average of power output in watts per kilogram.                                 |
| 30s Balance          | The 30-second moving average of the left/right power balance.                                       |
| 30s Power            | The 30-second moving average of power output.                                                       |
| 30s Watts/kg         | The 30-second moving average of power output in watts per kilogram.                                 |
| Avg Balance          | The average left/right power balance for the current activity.                                      |
| Avg Power            | The average power output for the current activity.                                                  |
| Avg Watts/kg         | The average power output in watts per kilogram.                                                     |
| Balance              | The current left/right power balance.                                                               |
| Intensity Factor     | The Intensity Factor™ for the current activity.                                                     |
| Kilojoules           | The accumulated work performed (power output) in kilojoules.                                        |
| Lap Balance          | The average left/right power balance for the current lap.                                           |
| Lap NP               | The average Normalized Power™ for the current lap.                                                  |
| Lap Power            | The average power output for the current lap.                                                       |
| Last Lap NP          | The average Normalized Power for the last completed lap.                                            |
| Last Lap Power       | The average power output for the last completed lap.                                                |
| Lap Watts/kg         | The average power output in watts per kilogram for the current lap.                                 |
| Max. Lap Power       | The top power output for the current lap.                                                           |
| Max. Power           | The top power output for the current activity.                                                      |
| Normalized Power     | The Normalized Power for the current activity.                                                      |
| Pedal Smoothness     | The measurement of how evenly a rider is applying force to the pedals throughout each pedal stroke. |
| Power                | Cycling. The current power output in watts.                                                         |
| Power Zone           | The current range of power output (1 to 9) based on your FTP or custom settings.                    |
| Time in Zone         | The time elapsed in each power zone.                                                                |
| Torque Effectiveness | The measurement of how efficiently a rider is pedaling.                                             |
| TSS                  | The Training Stress Score™ for the current activity.                                                |
| Watts/kg             | The amount of power output in watts per kilogram.                                                   |

## Smart Trainer

| Name             | Description                                                          |
|------------------|----------------------------------------------------------------------|
| Trainer Controls | During a workout, the resistance force applied by an indoor trainer. |

## Speed Fields

| Name           | Description                                   |
|----------------|-----------------------------------------------|
| Avg Speed      | The average speed for the current activity.   |
| Lap Speed      | The average speed for the current lap.        |
| Last Lap Speed | The average speed for the last completed lap. |
| Max. Speed     | The top speed for the current activity.       |
| Speed          | The current rate of travel.                   |

## Timer Fields

| Name                     | Description                                                                                                                                                                                                      |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Avg Lap Time             | The average lap time for the current activity.                                                                                                                                                                   |
| Elapsed Time             | The total time recorded. For example, if you start the activity timer and bike for 10 minutes, then stop the timer for 5 minutes, then start the timer and bike for 20 minutes, your elapsed time is 35 minutes. |
| Lap Time                 | The stopwatch time for the current lap.                                                                                                                                                                          |
| Last Lap Time            | The stopwatch time for the last completed lap.                                                                                                                                                                   |
| Timer                    | The current time of the activity timer.                                                                                                                                                                          |
| Time Ahead               | The time ahead or behind the Virtual Partner.                                                                                                                                                                    |
| Segment Time             | The amount of time racing the segment during the current activity.                                                                                                                                               |
| Timing Gates Split Delta | During a timing gates run, the difference between your current split time and your best completed split time.                                                                                                    |

## Workouts

| Name               | Description                                                                              |
|--------------------|------------------------------------------------------------------------------------------|
| Calories to Go     | During a workout, the remaining calories when you are using a calorie target.            |
| Distance to Go     | During a workout or course, the remaining distance when you are using a distance target. |
| Duration           | The time remaining for the current workout step.                                         |
| Heart Rate to Go   | During a workout, the amount you are above or below the heart rate target.               |
| Primary Target     | During a workout, the target for the primary workout step.                               |
| Reps to Go         | During a workout, the remaining repetitions.                                             |
| Secondary Target   | During a workout, the target for a secondary workout step.                               |
| Step Distance      | During a workout, the distance for the current step.                                     |
| Step Time          | The time elapsed for the current workout step.                                           |
| Time to Go         | During a workout or course, the remaining time when you are using a time target.         |
| Workout Comparison | A graph comparing your current effort to the workout target.                             |
| Workout Step       | During a workout, the current step out of the total number of steps.                     |

## VO2 Max. Standard Ratings

These tables include standardized classifications for VO2 max. estimates by age and sex.

| Males     | Percentile | 20–29 | 30–39 | 40–49 | 50–59 | 60–69 | 70–79 |
|-----------|------------|-------|-------|-------|-------|-------|-------|
| Superior  | 95         | 55.4  | 54    | 52.5  | 48.9  | 45.7  | 42.1  |
| Excellent | 80         | 51.1  | 48.3  | 46.4  | 43.4  | 39.5  | 36.7  |
| Good      | 60         | 45.4  | 44    | 42.4  | 39.2  | 35.5  | 32.3  |

| Males | Percentile | 20–29 | 30–39 | 40–49 | 50–59 | 60–69 | 70–79 |
|-------|------------|-------|-------|-------|-------|-------|-------|
| Fair  | 40         | 41.7  | 40.5  | 38.5  | 35.6  | 32.3  | 29.4  |
| Poor  | 0–40       | <41.7 | <40.5 | <38.5 | <35.6 | <32.3 | <29.4 |

| Females   | Percentile | 20–29 | 30–39 | 40–49 | 50–59 | 60–69 | 70–79 |
|-----------|------------|-------|-------|-------|-------|-------|-------|
| Superior  | 95         | 49.6  | 47.4  | 45.3  | 41.1  | 37.8  | 36.7  |
| Excellent | 80         | 43.9  | 42.4  | 39.7  | 36.7  | 33    | 30.9  |
| Good      | 60         | 39.5  | 37.8  | 36.3  | 33    | 30    | 28.1  |
| Fair      | 40         | 36.1  | 34.4  | 33    | 30.1  | 27.5  | 25.9  |
| Poor      | 0–40       | <36.1 | <34.4 | <33   | <30.1 | <27.5 | <25.9 |

Data reprinted with permission from The Cooper Institute®. For more information, go to [www.CooperInstitute.org](http://www.CooperInstitute.org).

## FTP Ratings

These tables include classifications for functional threshold power (FTP) estimates by sex.

| Males     | Watts per Kilogram (W/kg) |
|-----------|---------------------------|
| Superior  | 5.05 and greater          |
| Excellent | From 3.93 to 5.04         |
| Good      | From 2.79 to 3.92         |
| Fair      | From 2.23 to 2.78         |
| Untrained | Less than 2.23            |

| Females   | Watts per Kilogram (W/kg) |
|-----------|---------------------------|
| Superior  | 4.30 and greater          |
| Excellent | From 3.33 to 4.29         |
| Good      | From 2.36 to 3.32         |
| Fair      | From 1.90 to 2.35         |
| Untrained | Less than 1.90            |

FTP ratings are based on research by Hunter Allen and Andrew Coggan, PhD, *Training and Racing with a Power Meter* (Boulder, CO: VeloPress, 2010).

## Heart Rate Zone Calculations

| Zone | % of Maximum Heart Rate | Perceived Exertion                                                       | Benefits                                                   |
|------|-------------------------|--------------------------------------------------------------------------|------------------------------------------------------------|
| 1    | 50–60%                  | Relaxed, easy pace, rhythmic breathing                                   | Beginning-level aerobic training, reduces stress           |
| 2    | 60–70%                  | Comfortable pace, slightly deeper breathing, conversation possible       | Basic cardiovascular training, good recovery pace          |
| 3    | 70–80%                  | Moderate pace, more difficult to hold conversation                       | Improved aerobic capacity, optimal cardiovascular training |
| 4    | 80–90%                  | Fast pace and a bit uncomfortable, breathing forceful                    | Improved anaerobic capacity and threshold, improved speed  |
| 5    | 90–100%                 | Sprinting pace, unsustainable for long period of time, labored breathing | Anaerobic and muscular endurance, increased power          |

## Wheel Size and Circumference

When used for cycling, your speed sensor automatically detects your wheel size. If necessary, you can manually enter your wheel circumference in the speed sensor settings.

The tire size for cycling is marked on both sides of the tire. You can measure the circumference of your wheel or use one of the calculators available on the internet.





© 2025 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin logo, ANT+®, Auto Lap®, Auto Pause®, Edge®, Forerunner®, inReach®, VIRB®, and Virtual Partner® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Connect IQ®, Firstbeat Analytics®, Garmin Connect®, Garmin Connect+®, Garmin Express®, HRM-Dual®, HRM-Fit®, HRM-Pro®, Index®, Rally®, tempe®, Varia®, and Vector® are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google Inc. Apple®, iPhone®, and Mac® are trademarks of Apple, Inc., registered in the U.S. and other countries. The BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. The Cooper Institute®, as well as any related trademarks, are the property of The Cooper Institute. Di2™ is a trademark of Shimano, Inc. Shimano® is a registered trademark of Shimano, Inc. SRAM® is a registered trademark of SRAM LLC. Training Stress Score™ (TSS), Intensity Factor™ (IF), and Normalized Power™ (NP) are trademarks of Peaksware, LLC. STRAVA and Strava™ are trademarks of Strava, Inc. Wi-Fi® is a registered trademark of Wi-Fi Alliance Corporation. Windows® and Windows NT® are registered trademarks of Microsoft Corporation in the United States and other countries. Other trademarks and trade names are those of their respective owners.

M/N: A04967